

 
# Wardrobe door bottom guide

N-6549


• These tools may be helpful



Connector arm goes  
on rail.



Depress this tab  
to remove old  
guide.

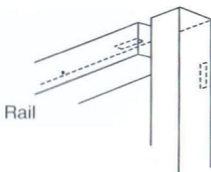

**INSTALLATION HINTS:** Remove door from track by pushing up track guides with a screwdriver. Swing door out and up to remove. Depress the locking tab with a screwdriver on side of rail and remove assembly. Insert new roller into top rail; be sure to replace the new roller in same manner in which the old one was removed (parts are marked left or right). Hang door; push guides down to engage track, adjusting for smooth operation.

**Don't forget to ✓ check:**

**SLIDING CLOSET DOOR**

