 


Wardrobe door roller

N-7046

• These tools may be helpful




Back of Panel


Rail

Connector arm goes on rail.

Depress this tab to remove old guide.

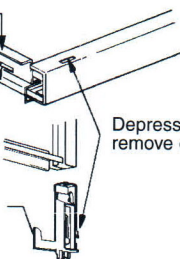


INSTALLATION HINTS: Remove door by pulling up bottom guide inserts, then lift door up and swing out. Remove guide from door frame as shown in drawing. Install new guide in same manner. Hang door and push nylon guide inserts down to engage bottom track.

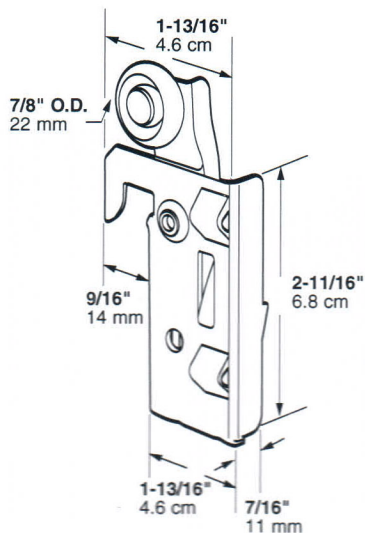

Don't forget to ✓ check:

SLIDING CLOSET DOOR

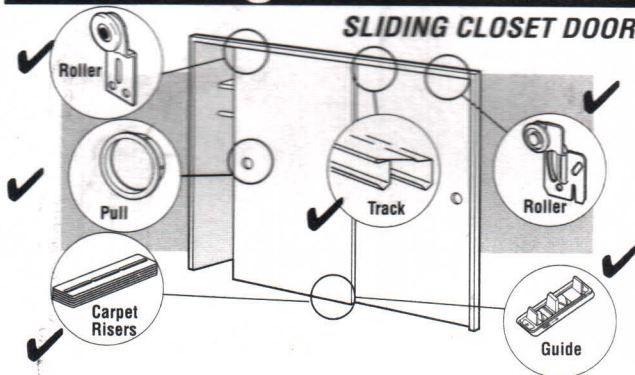

Common Mirror Door Roller Assemblies:

