



Tools needed

N 6560

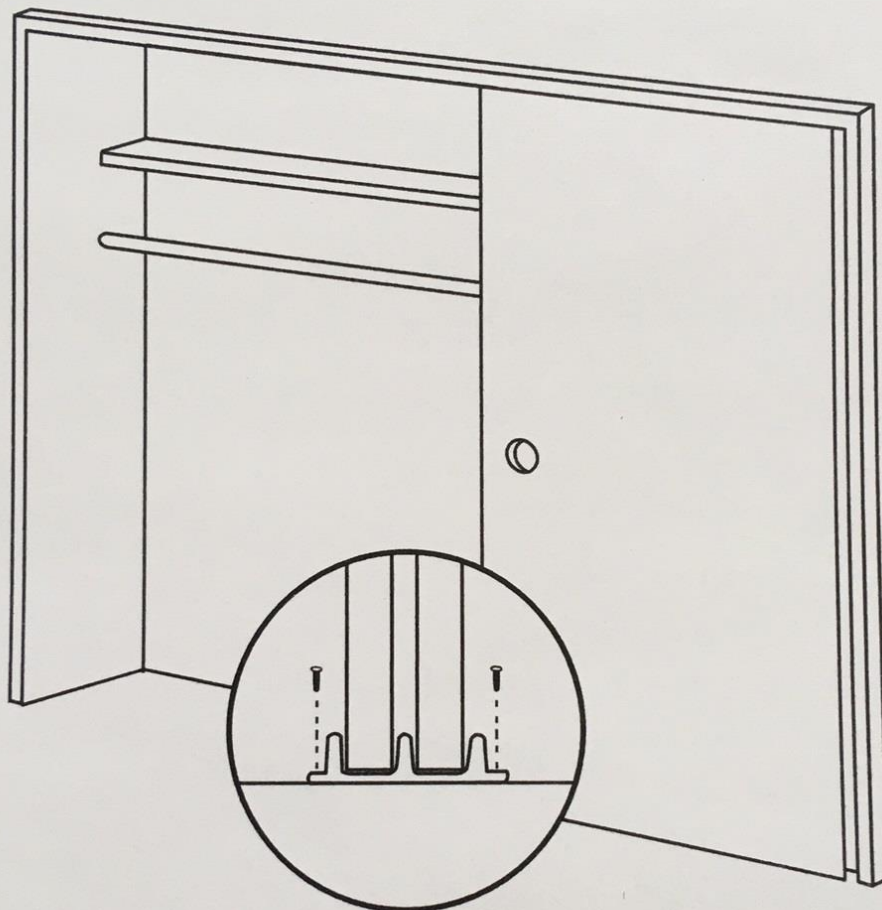

For 2-door unit, insert nylon post section in floor guide according to door thickness and locate under doors at center of opening. For 4-door unit (two guides), locate a guide 1/4" distance from each jamb, so as to engage both right and left hand pair of doors.

