



## INSTALLATION INSTRUCTIONS FOR THE UNIFIN® VERTICAL SHOWER SEAL

REMOVE OLD SEAL FROM GLASS AND CLEAN THOROUGHLY.


TAKE UNIFIN® 'PART A' AND PUSH SPIGOT INTO UNIFIN® 'PART B' RECEPTOR CHANNEL (SEE DIAGRAM BELOW)

USE THUMBS TO FIRMLY PUSH BOTH PARTS TOGETHER ALONG THE COMPLETE LENGTH OF THE SEAL UNTIL IT CLICKS. THE SEAL IS NOW READY TO FIT ONTO YOUR VERTICAL GLASS SCREEN.

THE UNIFIN® SEAL IS DESIGNED TO FIT ONTO A GLASS PANEL OF A SLIDING DOOR SHOWER ENCLOSURE. IT WILL BRIDGE A GAP BETWEEN THE MOVING PANEL AND THE FIXED PANEL OF GLASS.

ONCE THE SEAL IS ON THE GLASS, IF IT FEELS LOOSE ON THE GLASS, SIMPLY REMOVE THE SEAL AND REPEAT PUSHING 'PART A' AND 'PART B' TOGETHER UNTIL IT CLICKS AGAIN, THIS WILL ENSURE SATISFACTORY GRIP

ONTO THE GLASS. IF THE SEAL IS TOO LONG, SIMPLY MARK THE SEAL AT THE CORRECT LENGTH AND CUT WITH A JUNIOR HACKSAW. IF THE SOFT RUBBER BLADES ARE TOO LONG FOR THE GAP SIZE, SIMPLY TRIM TO APPROX 5MM MORE THAN THE GAP SIZE BETWEEN THE GLASS PANELS.

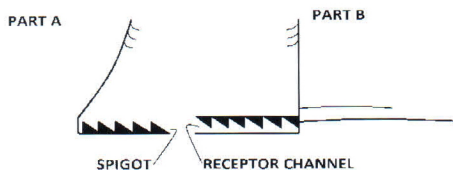

**FOR A FULL VIDEO INSTALL DEMO VISIT: [WWW.UNIBLADE.CO.UK](http://WWW.UNIBLADE.CO.UK)**