STRAIGHTAWAY 130
FITTING INSTRUCTIONS

SPECIFICATION

Maximum door weight	:130kg
Door thickness	:20mm - 50mm
Maximum door height	:3000mm
Track dimensions	:38mm(W) x 40mm(H)


Tracks can be Soffit or Side fixed.

Suitable for timber, aluminium or metal doors.

Smooth and silent running.

Soft closing available.

Simultaneous opening (syncro) optional.

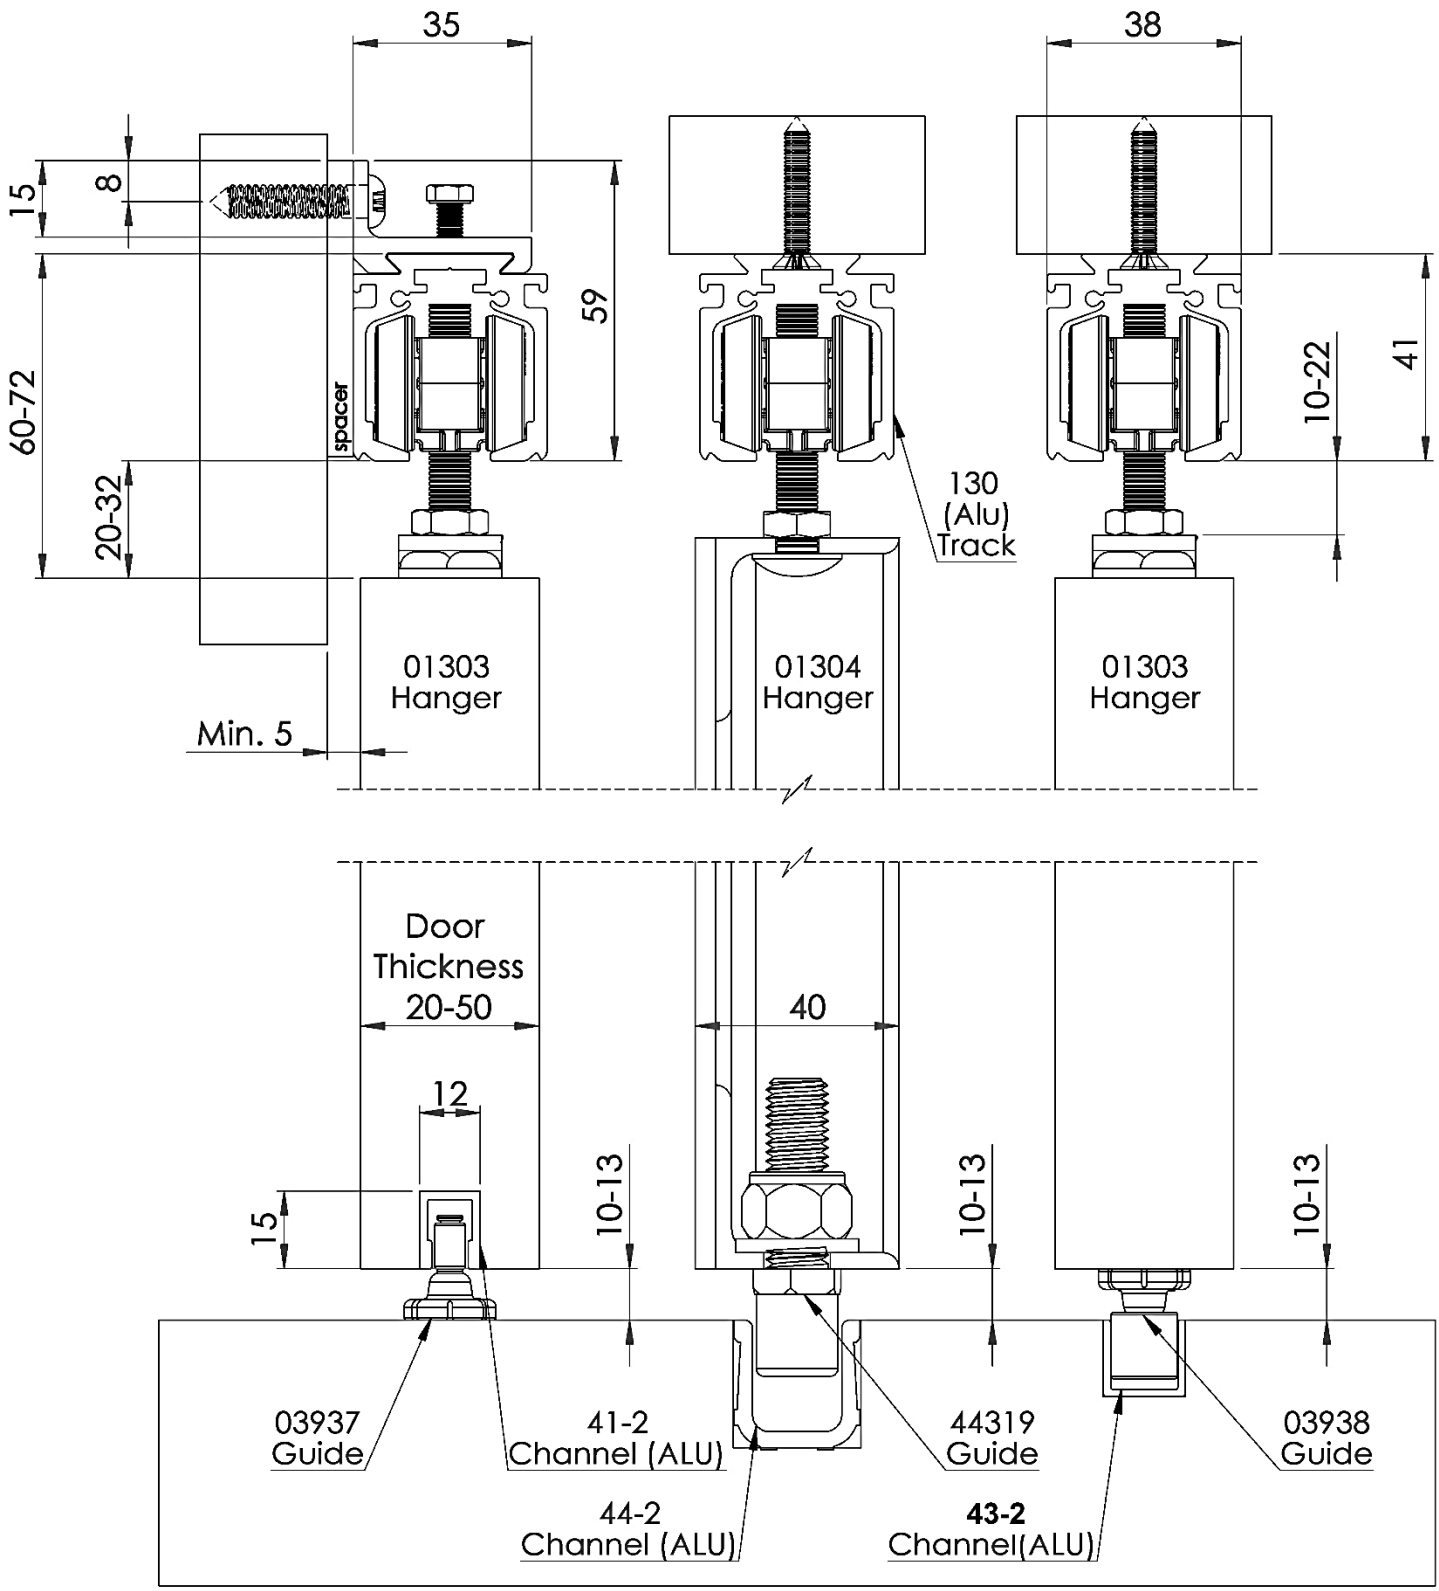

Hillaldam Coburn Ltd, Unit1, Cardinal West, Cardinal Way, Godmanchester PE292XN
Tel: +44 (0)208545 6720, E-mail:sales@Coburn.co.uk
www.Coburn.co.uk


PART No. 06426.10

COBURN SLIDING SYSTEMS


ACCESSORIES



01303 – HANGER FOR TIMBER DOOR

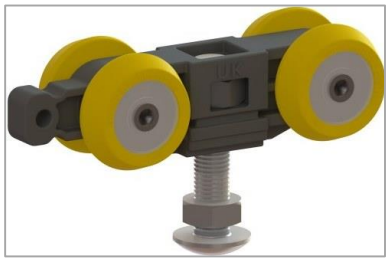


01304 – HANGER FOR METAL DOOR

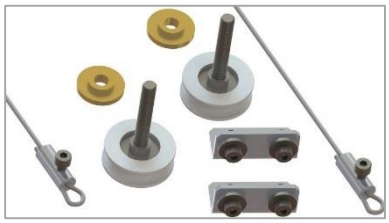

61401 – SIMULTANEOUS KIT




30614 – SOFT CLOSER, 130KG, TRACK MOUNTED

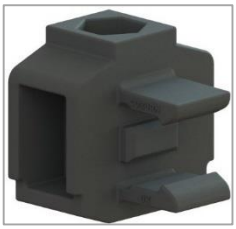

01720 – TRACK STOP, PAIR




13020/24/30/36/40/60 – ALUMINIUM TRACK

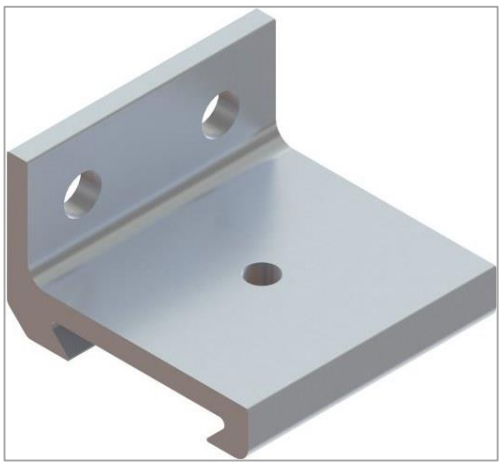


02008 – FACE FIXED BRACKET (5PCS)

02009 – FACE FIXED BRACKET (8PCS)


ACCESSORIES

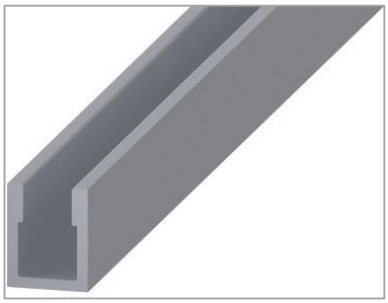

41224/36/60 – ALUMINIUM CHANNEL

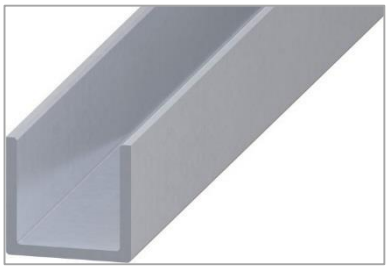


43218/21/24/36 – ALUMINIUM CHANNEL

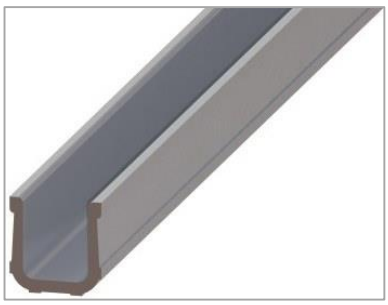

44218/21/24/30/36/60 – ALUMINIUM CHANNEL



03937 – ADJUSTABLE RATTLE PROOF GUIDE
6mm ROLLER, FOR TIMBER DOORS

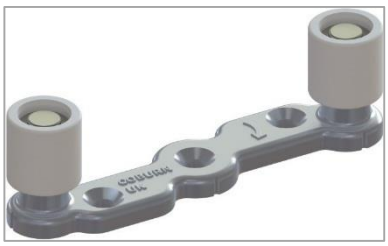

03938 – ADJUSTABLE RATTLE PROOF GUIDE
13mm ROLLER, FOR TIMBER DOORS




22392 – FLOOR GUIDE, PLASTIC
FOR TIMBER DOORS




44319 – FLOOR GUIDE, PAIR
FOR METAL DOOR


Step 1 Soffit fixing d = 275mm – 350mm

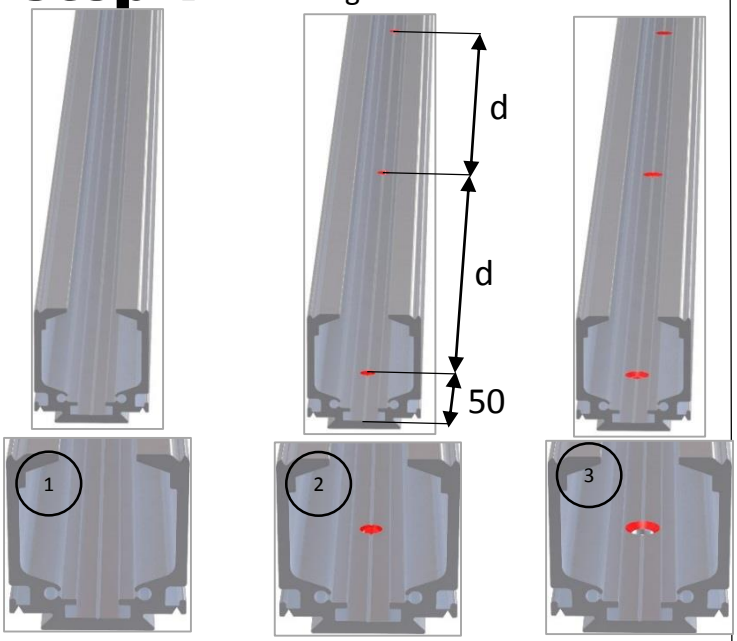

2. Pre-drill ø5 holes in track for easier installation.

3. We recommend to countersink all holes to eliminate the possibility of hanger bolt or hanger body touching the screw and stopping or interfering with the movement

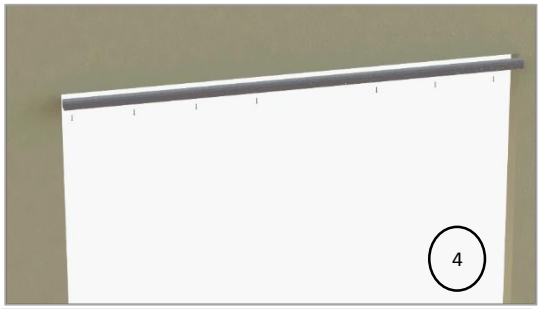

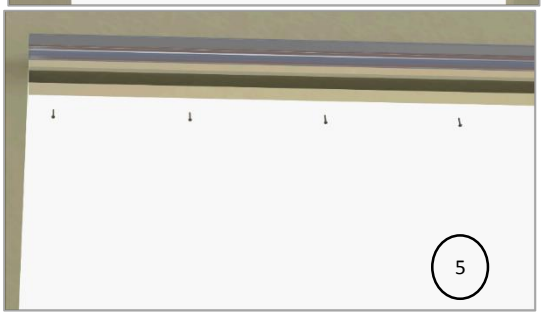





5. Go underneath the opening


6. Insert the track into place and secure it with screws


Step 2 Side fixing




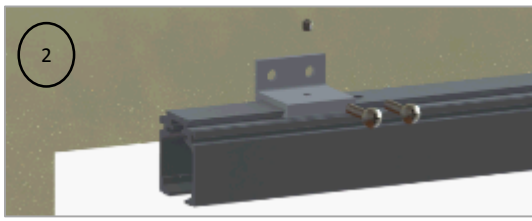

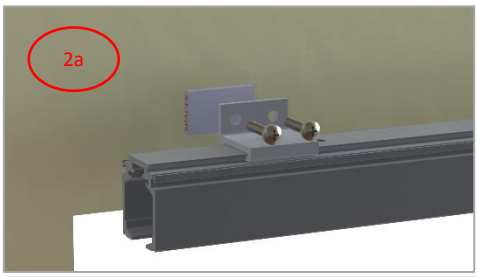

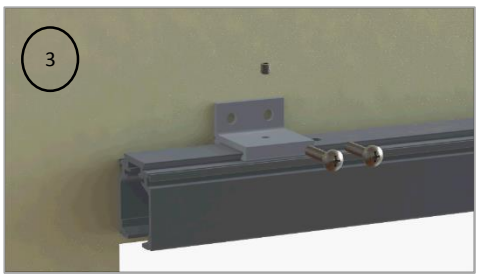

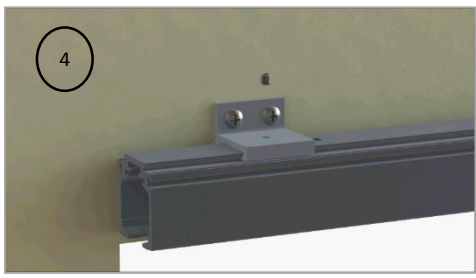

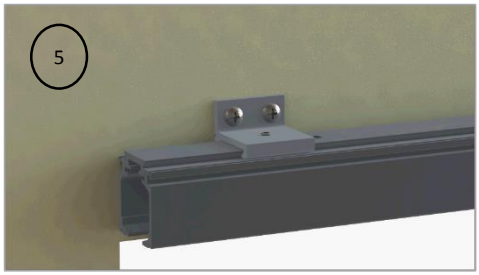

1. Track preparation

2. Slide brackets on top of track

2a. OPTIONAL STEP: Use a spacer (NOT SUPPLIED BY COBURN) between bracket and wall so that 5mm minimum distance between door and wall is maintained

3. Butt brackets onto wall

4. Fix brackets with screws

5. Secure brackets in place with socket screws


Step 3 Identifying 01303 – Hanger for timber doors









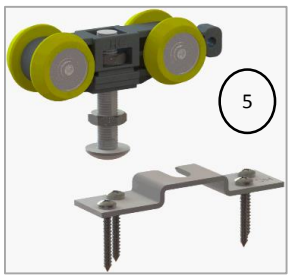





1. Prepare hanger for timber doors
2. Insert wide nut into hanger bolt
3. Insert thin nut into hanger body
4. Screw hanger bolt into thin nut
5. Insert screws into plate
6. Slide plate into hanger bolt
7. Secure plate with wide nut

Step 4 Identifying 01304 – Hanger for metal doors









1. Prepare hanger for metal doors
2. Insert thinner nut inside the hanger body
3. Screw wider nut onto hanger bolt
4. Screw hanger bolt into thinner nut

Step 5 Door preparation FOR TIMBER DOORS









1. Fix the door plates at minimum 100mm up to a maximum 150mm from the top edge of the door with screws.


2. Make a routing on the bottom of the door for the bottom channel.


4. Insert the bottom channel into routing and secure it with screws.

NB: For the correct installation of Straightaway 130 sliding door system a bottom guide MUST be used. Please enquire for different options.

I.E. : 22392 – 41-2 bottom channel with a 22392 bottom guide

Step 5 Door preparation FOR METAL DOORS

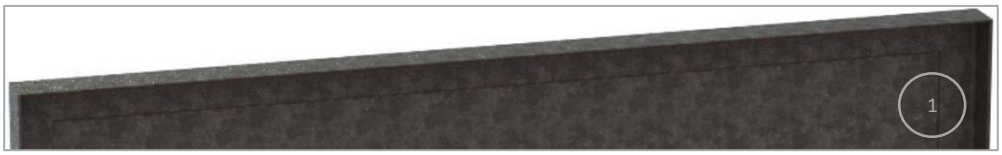

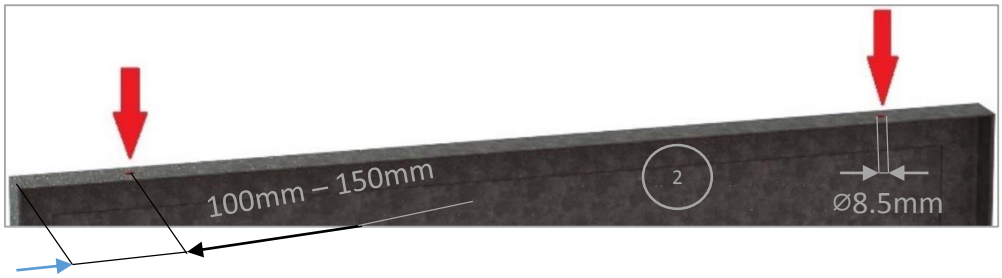




1. Metal door preparation


2. Drill 2 Ø8.5mm holes for the hanger bolts at minimum 50mm up to a maximum 100mm from the edge of the door


3. Fix a bottom guide

NB: For the correct installation of Straightaway 130 sliding door system a bottom guide MUST be used. Please enquire for different options.

Step 6 Door installation FOR TIMBER DOORS

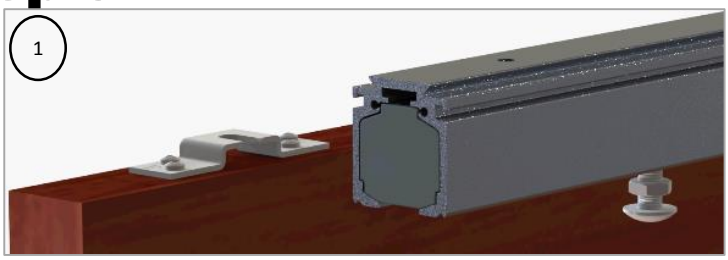

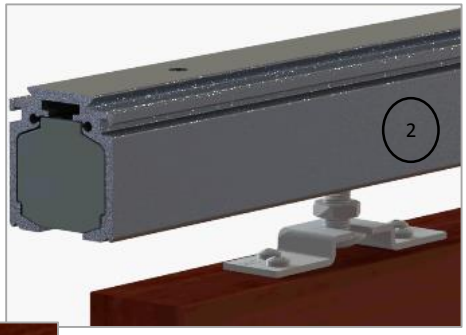

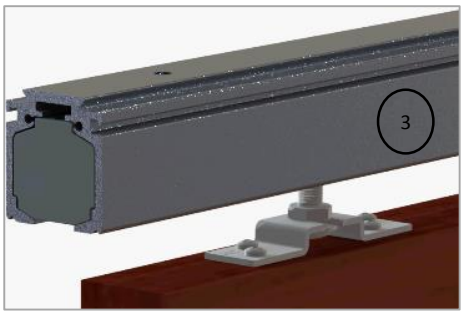









1. Door installation
2. Insert door plate into hanger bolt
3. Secure the assembly by tightening nut onto plate
4. With the door in fully closed position the guide on the floor
5. Slide the guide halfway in the channel
6. Ensure the door is levelled and fix 2 screws in the 2 holes that are accessible
7. Fully close the door and fix 2 screws in the holes that are accessible

NB: Guide should be halfway inside the channel

Step 6 Door installation FOR METAL DOORS














1. Door installation
2. Place the door underneath the track
3. Screw hanger bolts into hangers


A2. To secure the hanger bolt in position tighten nuts

Step 7 Door adjustment

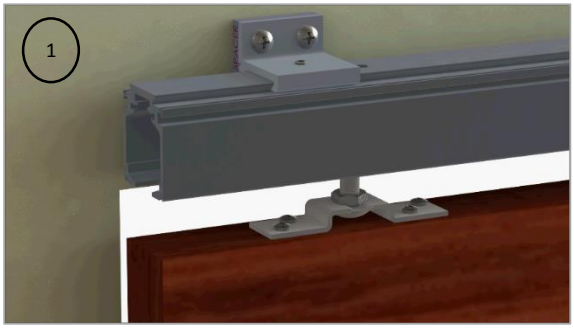

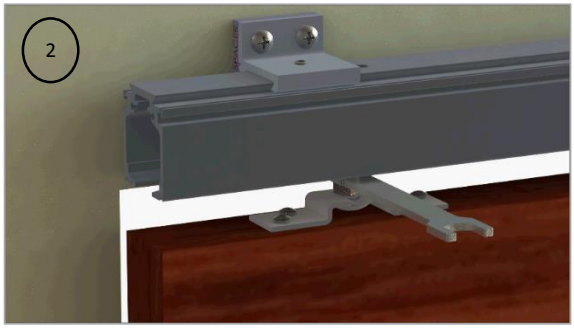

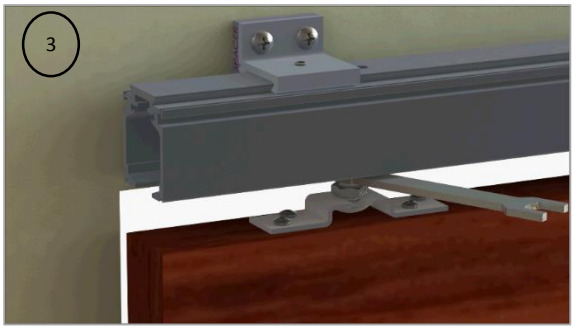

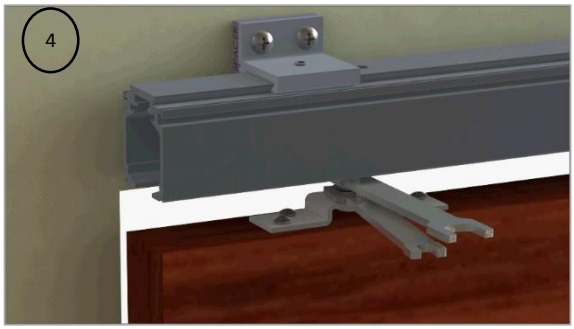

2. Loosen the nut to allow movement of the hanger bolt
3. Use a spanner to rotate the hanger bolt, this will raise or lower the door
4. After adjusting and levelling the door secure the hanger bolt by tightening the loosen nut

NB: To make sure that the hanger bolt doesn't move while tightening the nut hold it in position with a spanner

---

Straightaway 130

Fitting instructions

COBURN
SLIDING SYSTEMS

Hillaldam Coburn Ltd.

Unit 1, Cardinal West, Cardinal Way,

Godmanchester, PE29 2XN, United Kingdom

Phone: +44 (0)20 8545 6680

Fax: +44 (0)20 8545 6720

E-mail: sales@coburn.co.uk

www.Coburn.co.uk