
slide

doors without hinges

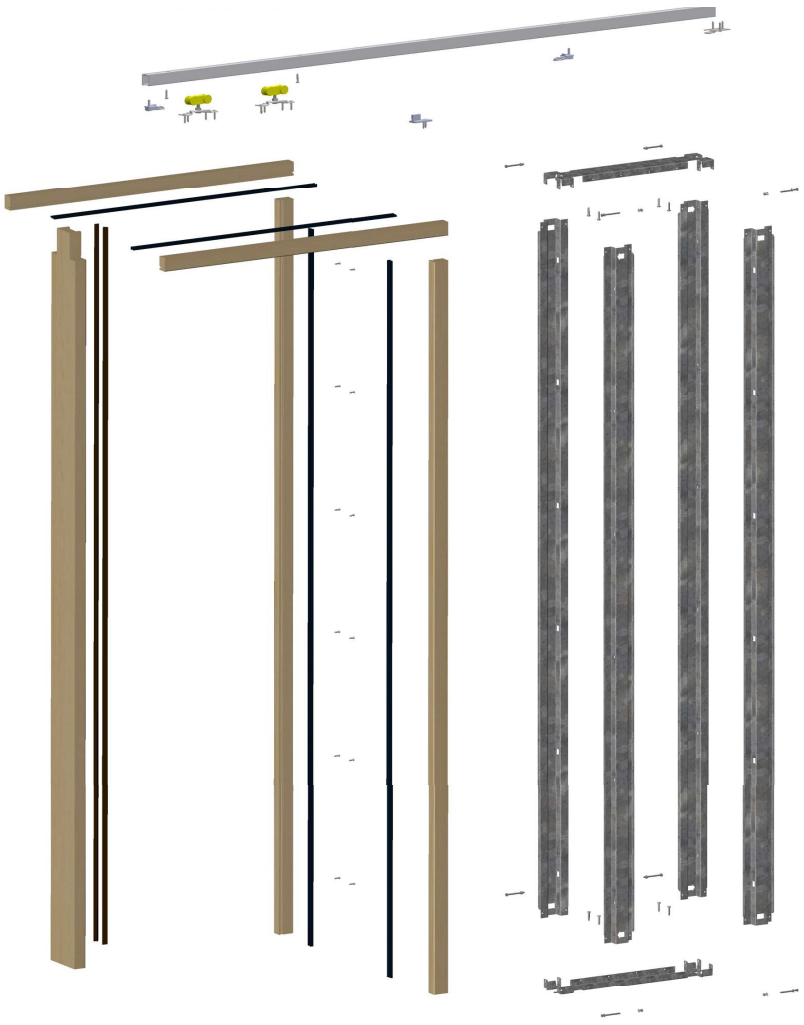

Single Door Installation Guide

Introduction

Please read this manual thoroughly before attempting to assemble and install your system. This will assure optimum performance and safety.

Your Pocket Door Kit has been designed to be installed by competent DIY enthusiasts using correct tools and adherence to safety. If in any doubt please seek the advice of a building professional.

Safety Precautions



Safety must always be your primary concern during the assembly, installation and operation of your Pocket Door. Always be aware of the risks involved with moving parts and installation. If in doubt please seek further assistance before proceeding.

- If at any time, a component of the Pocket Door works loose, correct it immediately.
- Working with tools of any kind can be dangerous. Your Pocket Door requires some basic assembly with hand tools. If you are in any doubt about how to use these tools correctly, please seek advice from a suitably experienced person.
- Always ensure that other personnel in the immediate vicinity are aware of any fitting operations that will be occurring. Check there are no loose components or tools likely to fall and cause injury during the fitting operation. Where possible, all assembly work should be completed at ground level.
- Ensure protective gloves are worn when handling the Pocket Door Frame components.
- Always use appropriate equipment.


Please use common sense when installing your Pocket Door Kit!

Components

Please familiarise yourself with and check all components before starting installation.


Track Components:

A. Running Track x 1 (2 screws)
B. Running Gear x 2
C. Door Hanger x 2 (4 screws per hanger)
D. Door Stopper x 2
E. Running Track Release Bracket x 1 (3 screws)
F. Door Guide x 1 (2 screws)

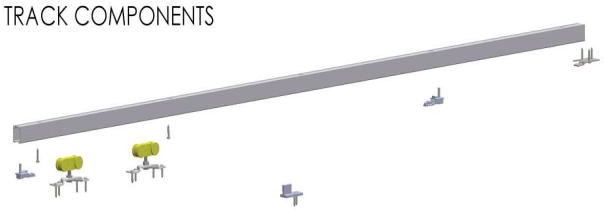

Pocket Frame Components:

G. Top Pocket Plate x 1 (4 screws)
H. Bottom Pocket Plate x 1 (4 screws)
I. Pocket Uprights x 4 (2 nuts and bolts per upright)
J. Plasterboard Screws x 50

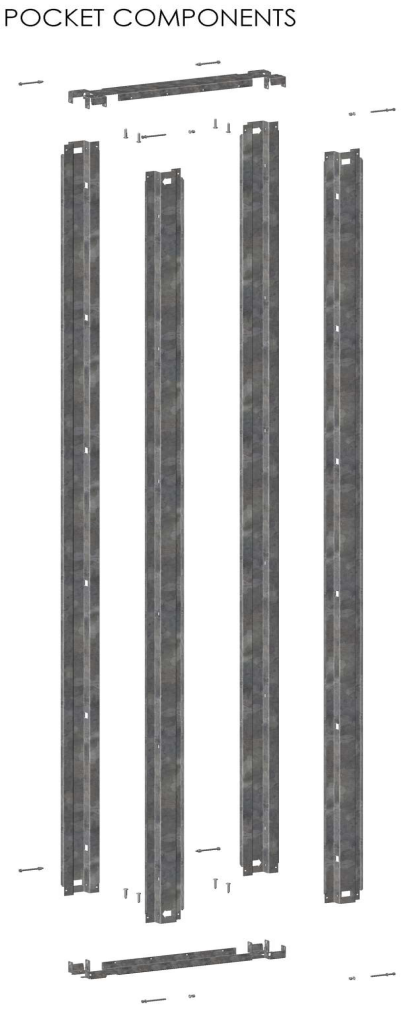

Not included in this kit:

- Door
- Door Furniture
- Plasterboard
- Architrave
- Rawl plugs and screws for concrete floor fixing
- Adhesive silicone

Prepare the Studwork

The Pocket Frame must be installed at finished floor level. Please increase the stud height to accommodate finished floor level and use packing at the bottom of the pocket kit if required.


Check the opening size of the stud work (measure to finished floor level) is correct for the system ordered and door size.

Ensure stud opening is plumb and square.

Mark centre lines on the opening studs (top and sides) with pencil.

Drop plumb-line from centre line at the top to the ground and mark in several places so a line can be drawn along the ground.

Decide which side will be the pocket and which will be the door passage.

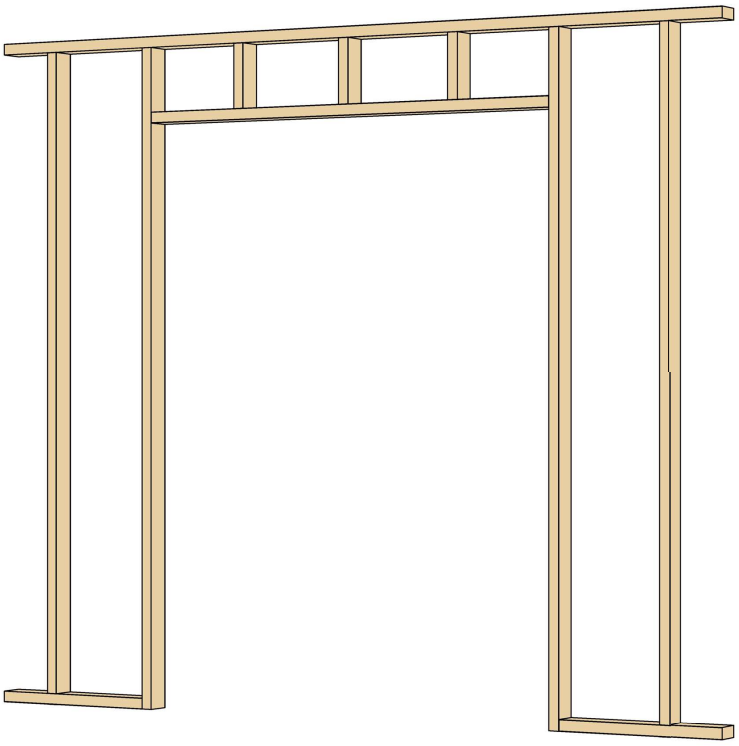

Assembly and Installation of Pocket Frame.

1. Build the Pocket Frame by inserting the Top and Bottom Pocket Plates into the Pocket Uprights.

   Note: This should be done on a flat surface, like the floor, and only inserted into the Stud Opening once completely assembled.



   Note the already folded flap will position inside the Pocket Upright.



2. Fold up all the Wing Flaps on the Top and Bottom Pocket Plates and locate in the Pocket Uprights.

   The Wing Flaps must remain on the outside of the Pocket Upright.





3. Insert the bolt to fix. Do not over tighten the bolt as this may need to be adjusted later.

4. Repeat for all four Pocket Uprights both top and bottom.



5. Ensure the Arrows (cut outs in the Pocket Uprights) are pointing as per the diagram opposite.

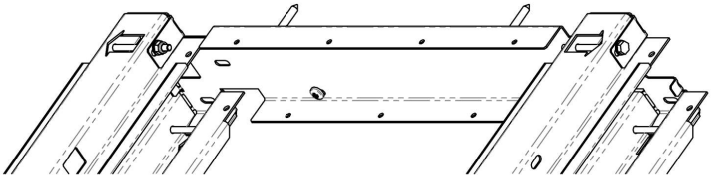


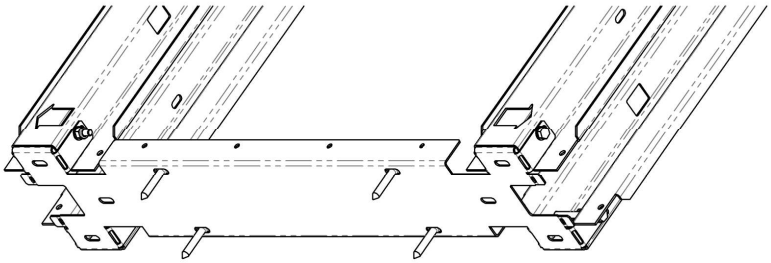

6. On the Top Pocket Plate only fold the smaller Inner Track Location Tabs so they are at right angles to the Plate.




7. Decide which side the pocket will be on.
On the underside of the Top Stud using centre line previous marked and mark the pilot hole positions for the Fixing Screws for the Top Pocket Plate. Use the table below to determine the Fixing Screw Positions for the door size you are installing.

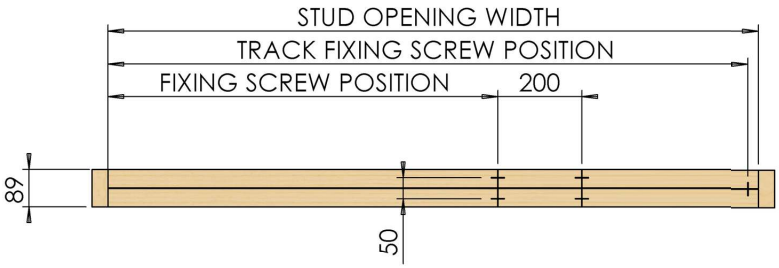


Dimensions are suitable for using the Slide Wooden Jambs Module

DOOR WIDTH	STUD OPENING WIDTH	FIXING SCREW POSITION
610	1248	776
686	1400	852
762	1552	928
838	1704	1004
914	1856	1080
CUSTOM	2 x WIDTH + 28	WIDTH + 166


8. Offer the assembled Pocket to the Top Stud and secure with 4 screws through the Top Pocket Plate and into the previous drilled pilot holes.

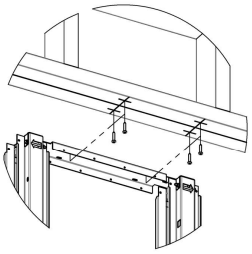

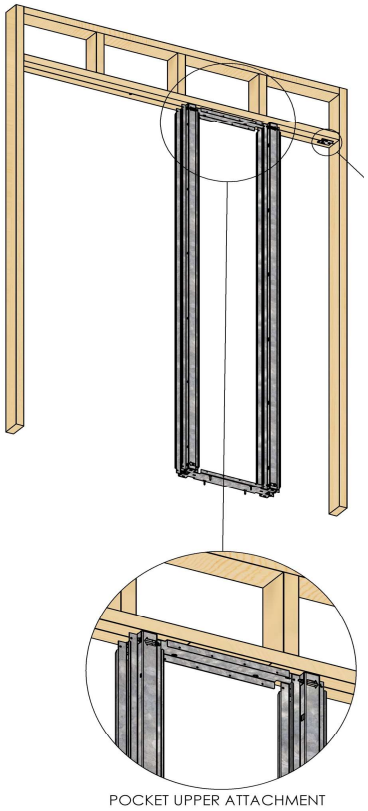


POCKET UPPER ATTACHMENT

9. Slide the Bottom Pocket Plate left or right, in or out, until the Pocket Upright is plumb in all directions. Accuracy is imperative to ensure the door hangs and operates correctly.

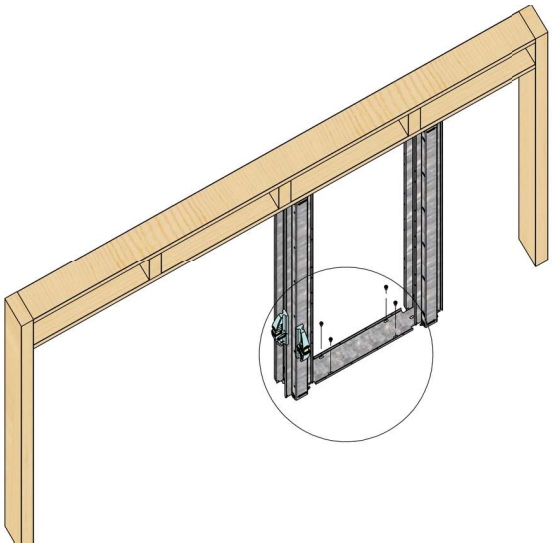


10. Once the Pocket Frame is plumb, mark and fix the Bottom Pocket Plate to the floor through 4 holes with screws supplied (if floor is timber) or appropriate rawl plugs and screws (not supplied) depending on floor construction. Care should be taken of any underfloor cabling or pipes.

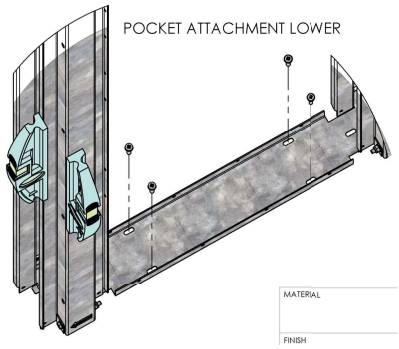

11. Fix the Door Guide (also known as the Sharks Fin) to the front of the Bottom Pocket Plate.

    Note: you may need to remove the bolt from one of the uprights to screw the Sharks Fin in place.


    Ensure the Door Guide is square to the Bottom Pocket Plate cut out as this is used to ensure the door runs in parallel to the Pocket.

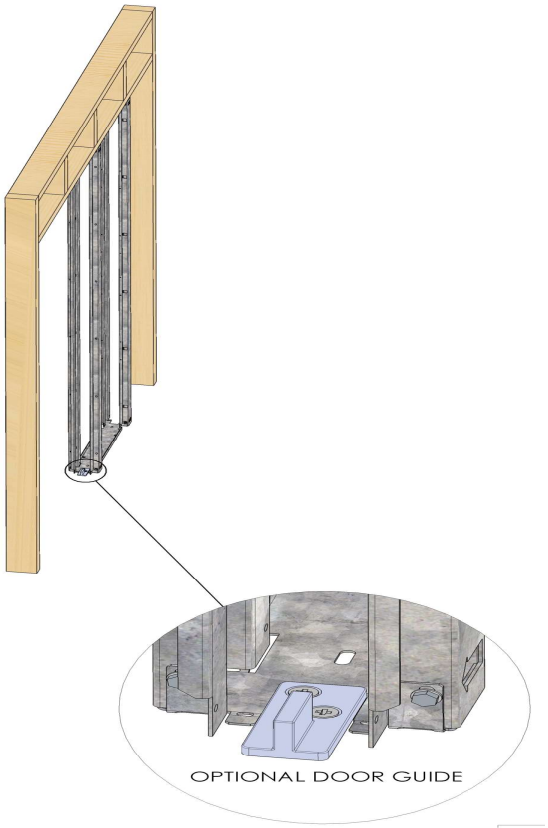

12. Now tighten the bolts at the top and bottom of all the Pocket Uprights.

Installation of the Running Track


1. Fix the Running Track Release Bracket using the screws provided on the pocket side along the previously marked centre line.

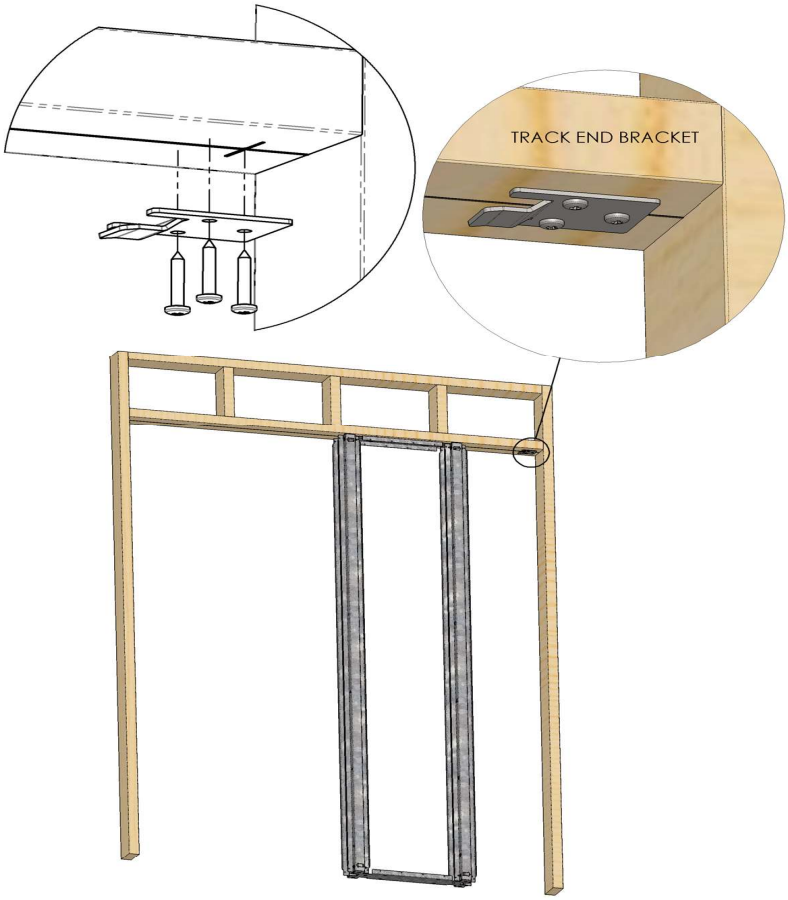


2. Cut the Running Track to the length of the required Door Width using the dimensions from the table.

DOOR WIDTH	TRACK LENGTH
610	1146
686	1298
762	1450
838	1602
914	1754
CUSTOM	2 x WIDTH - 74

3. Insert the Running Gear and Door Stoppers into the Running Track as they need to be inserted before fixing.

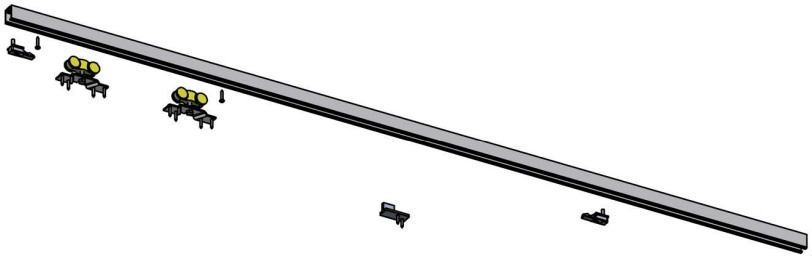


4. Insert the end of the Running Track into the Running Track Release Bracket.

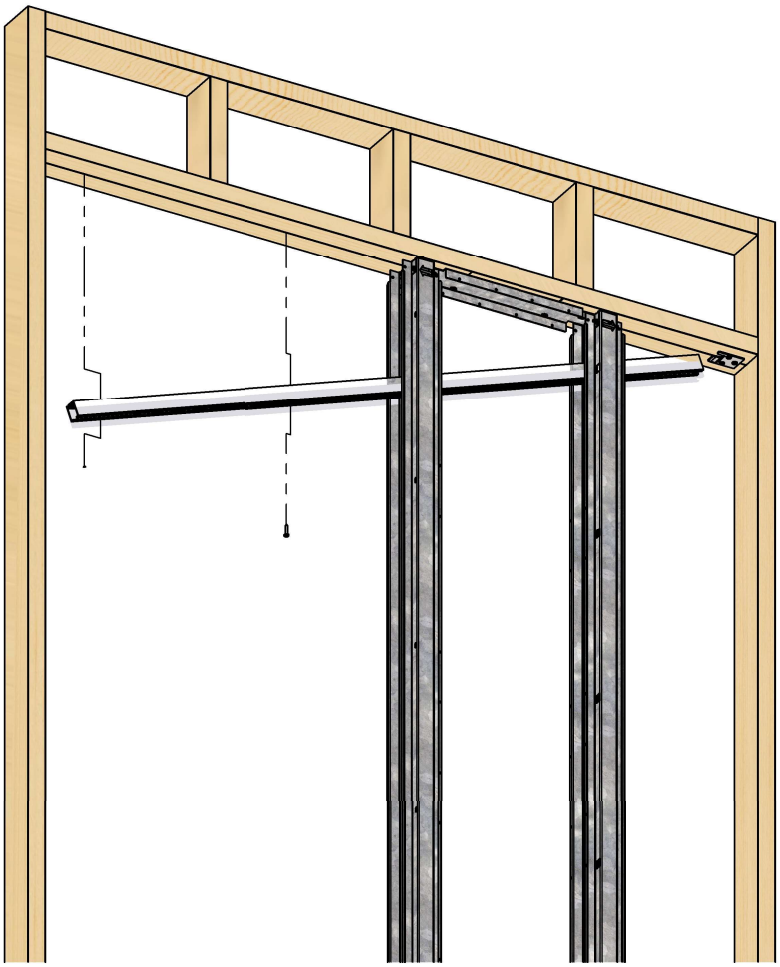

5. Raise the Running Track to locate into the Top Pocket Plate between the previously folded Inner Track Location Tabs and hold in place using a G-Clamp ensuring it is along the previously marked centre line.


   It is essential that the Running Track should only be fixed to the Top Stud through the Pocket Passage. This has been specifically designed by Slide Systems to allow for the removal of the Running Track, if required in future.

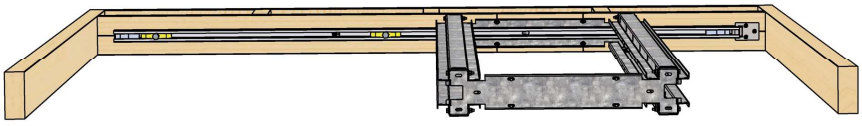

Note: The Running Track should still line up down the centre line previously marked on the underside of the Top Stud.

Installation of the Electric Module (Optional)

1. If you have purchased the Electric Module for either a light switch or socket now is the time to install the module. Please refer to the separate installation instructions and return to the next steps below.

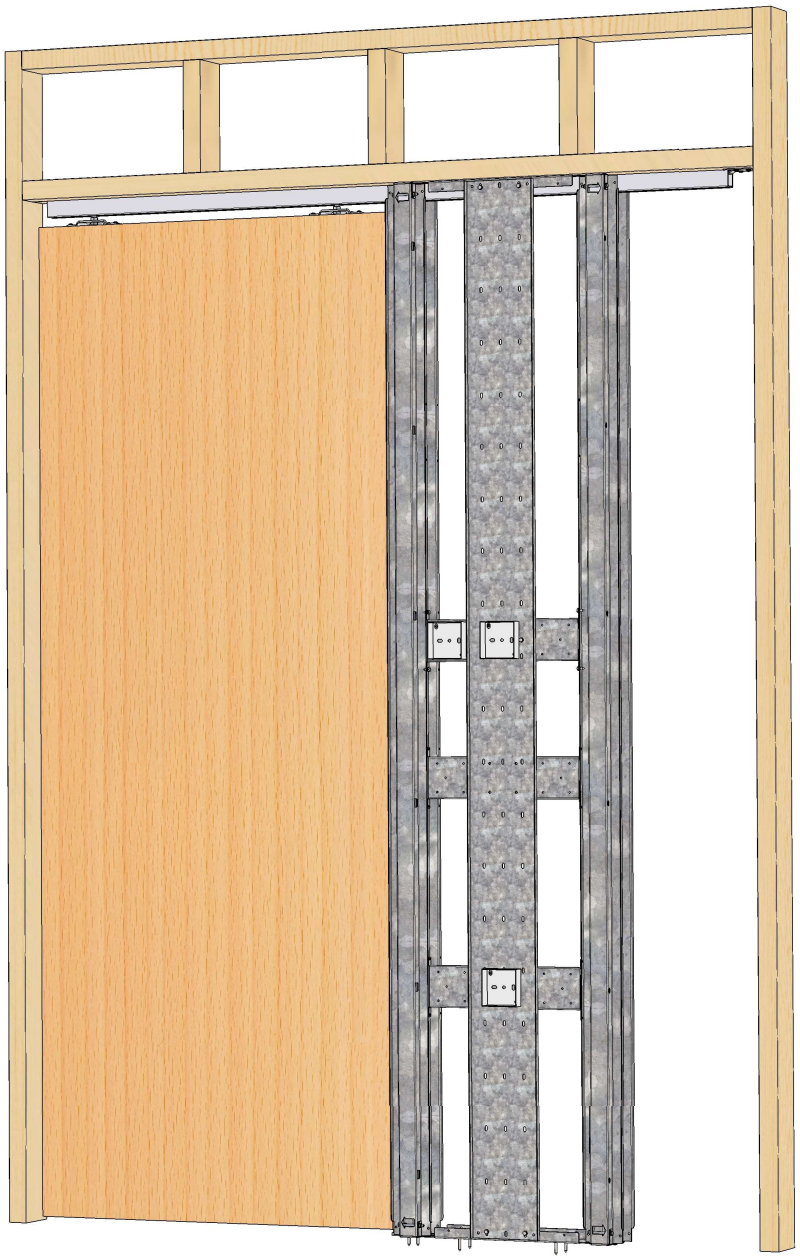


Installation of the Door

1. Fix the Door Hangers to the top of the door with the screws supplied.
   The Hanger should be placed a minimum of 60mm from the centre of the Hanger to the end of the door at each end.

   It is important to ensure the Hanger is positioned centrally on the top of the door and that both hangers face the same way.


   Rout the bottom of the door using an 8mm routing tool to a depth of 20mm. Do not rout the entire length of the door. Leave 5mm at the leading edge if you do not want the rout to be visible.

   Door furniture should be fitted at this point using specific instructions for these items.

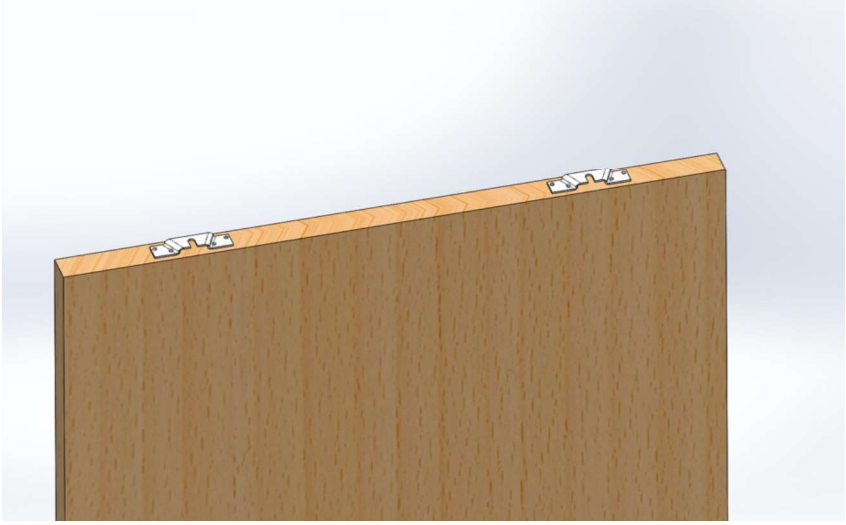

2. Hang the Door on the Running Gear by locating the Hangers between the two nuts of the Running Gear (previously installed) and tighten with spanners.


   Ensure the Running Gear Bolt is located firmly into the back of the Door Hanger and has not moved forward when tightening as this will cause mis-alignment.

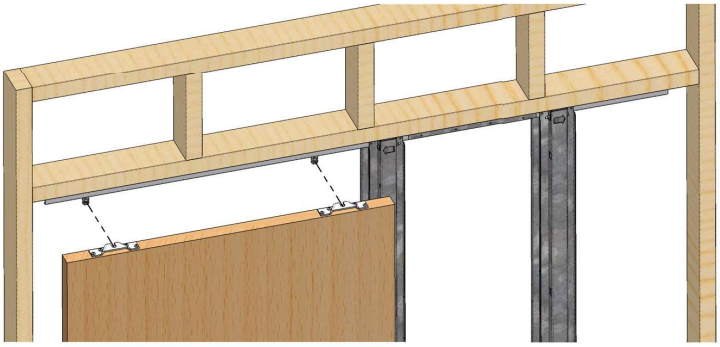

3. Gently move the door into the Pocket ensuring the Sharks Fin locates correctly in the rout at the bottom of the door. Ensure the door runs smoothly and is plumb.



4. Adjustment can be made by raising or lowering the appropriate Running Gear Bolt. Again, ensure the Running Gear Bolt is located firmly into the back of the Door Hanger and has not moved forward when adjusting.

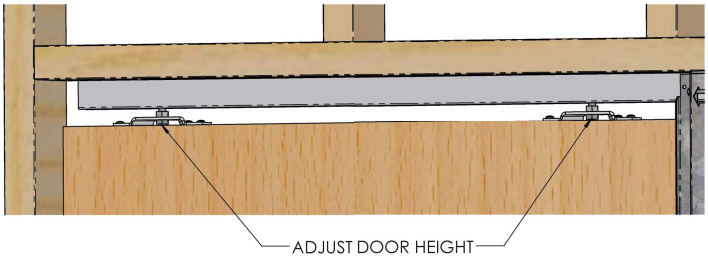

Install the Inner Lining Boarding (Optional)


1. (Optional step) Inner Lining Boarding.

   Note: The Inner Lining Boarding cannot be fitted if the Electrical Module has been installed.

   The Inner Lining can be either plasterboard or plywood but must be 12mm thick.

2. Cut plasterboard or plywood to the correct size and fix in between each Frame Upright using adhesive along the flanges of the Pocket Uprights. Note the plasterboard over the top of this will also hold it in place when screwed to the Pocket Frame.


   The Inner Lining Board option has been specifically designed by Slide Systems for additional rigidity, sound proofing and for optionally mounting fixings against the pocket itself. i.e. boxing for enclosed toilet systems or a radiator or shelving.

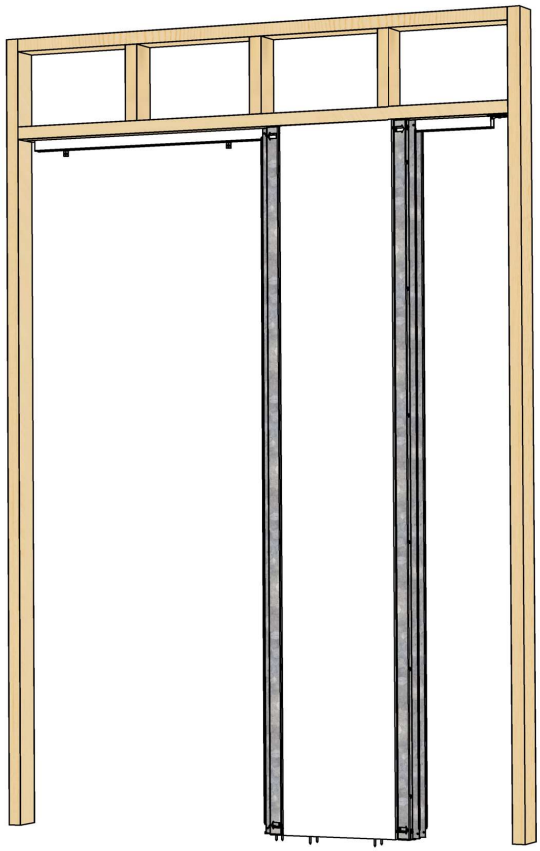

Installation of the Jambs Module (Optional)


1. If you have purchased a Jambs Module from Slide Systems now is the time to install the module. Please refer to the separate installation instructions and return to the next section below.

2. If you are installing your own Jambs, see the important dimensions opposite for the Top Jamb to ensure the Running Gear is not visible when the door is in a closed position.

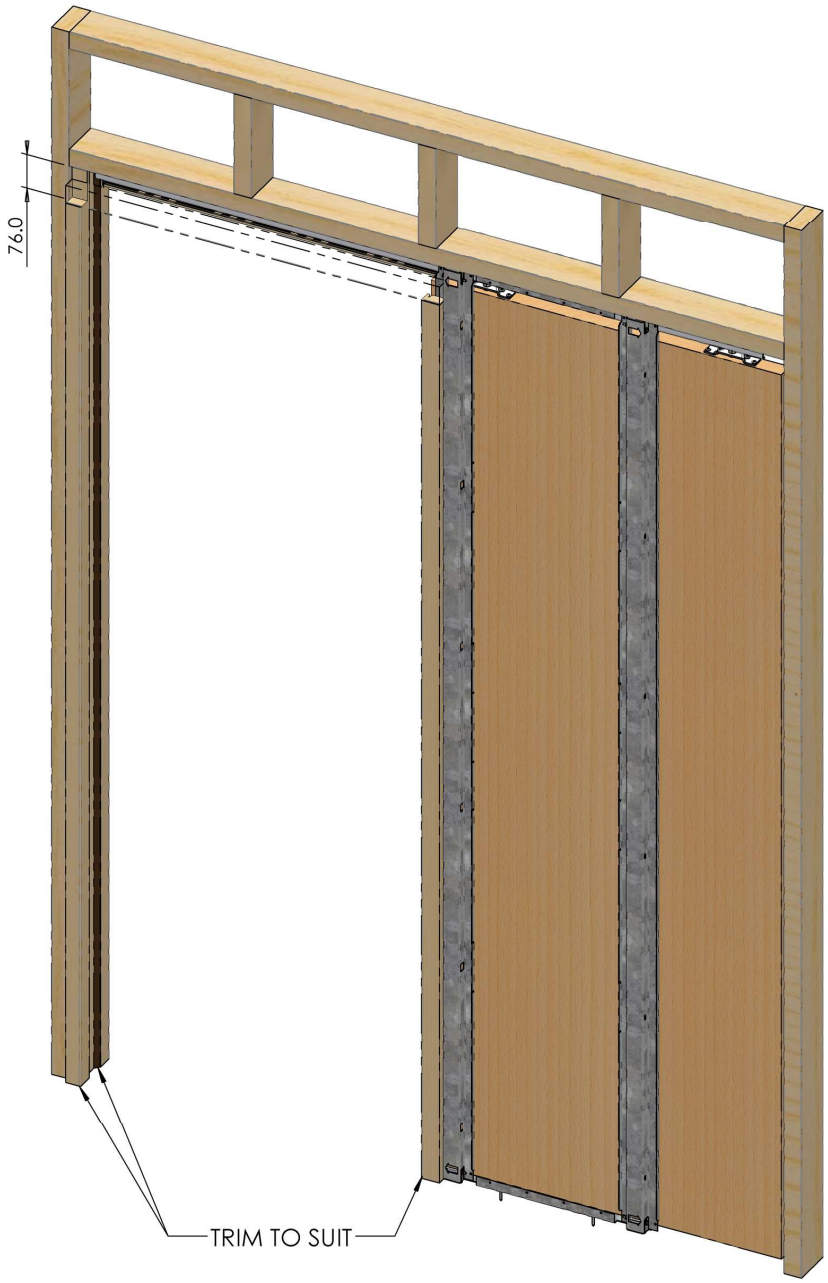

Installation of the Plasterboard

1. The Door must be in the closed position before plasterboard is fixed to ensure no damage when drilling holes.

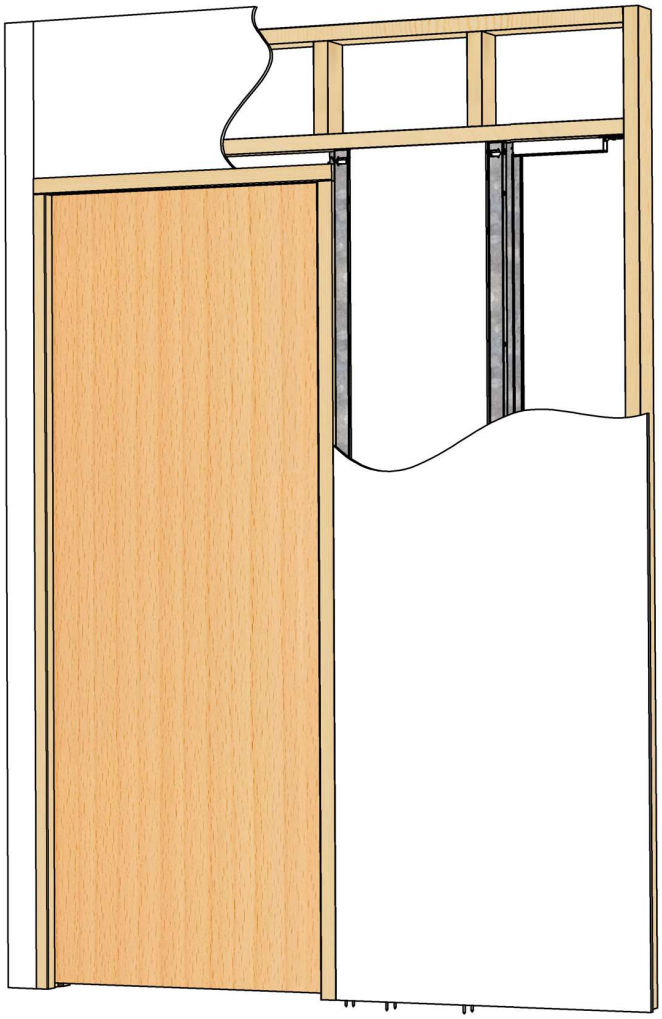

2. Position a whole sheet of 12.5mm plasterboard up to the Jambs on Passage edge, drill holes (through the Plasterboard into the Pocket Uprights) using 2mm drill and fix using plasterboard screws provided.

   Care should be taken, by supporting the Pocket Uprights accordingly, to avoid bending the Frame by over exerting pressure when drilling holes for plasterboard screws.

   Ensure that screws do not pass into the pocket as this could cause markings to the door that Slide Systems cannot be responsible for.

Your Pocket Door is now ready for a plaster skim or drylining.

If Architrave and Skirting (not supplied) are required fix using adhesive.

Disclaimer

- All specifications are subject to change without prior notice.
- The information given in this user manual is believed to be accurate and reliable. Slide Systems assumes no responsibility for omissions or inaccuracies.
- The user of this information and product assumes full responsibility and risk.
- Pocket Door Kits should not be used in any structural calculations for openings. Slide Systems accepts no responsibility for problems caused by unsafe or unsatisfactory installation or operation.
- Pocket Door Kits have moving parts that may cause injury due to poor installation and unsafe operation. Slide Systems accepts no responsibility for problems caused by unsafe or unsatisfactory installation or operation.
- Pocket Door Kits are supplied with adjustable door stops allowing door and jambs to be flush when open. If concerns exist stops should be set to protrude the door 70mm
  from the pocket when open. Slide Systems accepts no responsibility for accidents or injury caused from stop settings.
- Pocket Door Kits are required to be fixed to the floor and stud work. Slide Systems accepts no responsibility for damaged caused to pipes or cables (either underfloor or in the stud wall).
- Slide Systems accepts no responsibility for damage caused to doors from plasterboard screws that have protruded into the pocket due over tightening or the use of non-supplied screws.
- This document is a guide only.

Warranty

Your Pocket Door Kit carries a five-year warranty from the original purchase date.

During the warranty period, any component found to be defective in material or workmanship will, at the discretion of Slide Systems, be replaced or repaired at no charge.

This may be done on a 'return-to-base' arrangement for serious defects. For minor component failures, replacements may be sent directly to the customer / dealer for replacement. This can be negotiated at the time of the warranty claim to come to a mutually convenient arrangement for all parties. Slide Systems will take all reasonable action to ensure customer satisfaction.

Your Pocket Door Kit must be installed and operated in accordance with this Guide. Failure to do so will result in this warranty becoming null and void. Any unauthorised modifications to the design will void the warranty and may compromise the safety of the Pocket Door.

What is not covered by your Warranty:

- Damage caused by repair or maintenance performed using methods not specified by Slide Systems or by non-authorised dealers of Slide Systems products.
- Damage caused by the use of non-genuine parts.
- Damage caused by modifications to the Pocket Door not approved by Slide Systems.
- Damage caused to the kit by improper storage or transport.
- Damage caused by unsatisfactory installation.
- Damage caused by unsatisfactory support structure.

If you should experience a problem with your Pocket Door Kit you should contact your reseller or installer. They will be able to resolve the problem quickly and efficiently. If you are unable to contact the original reseller, then please contact Slide Systems directly.

© Copyright 2014 Slide Systems Limited.

Registered Office:
Slide Systems Limited
Wadebridge House,
16 Wadebridge Square Dorchester. DT1 3AQ

Registered in England No. 08696562
www.slidesystems.co.uk

