

Simple Type Furniture Pocket Door -Installation Instruction

Installation Parameters


≤30kg

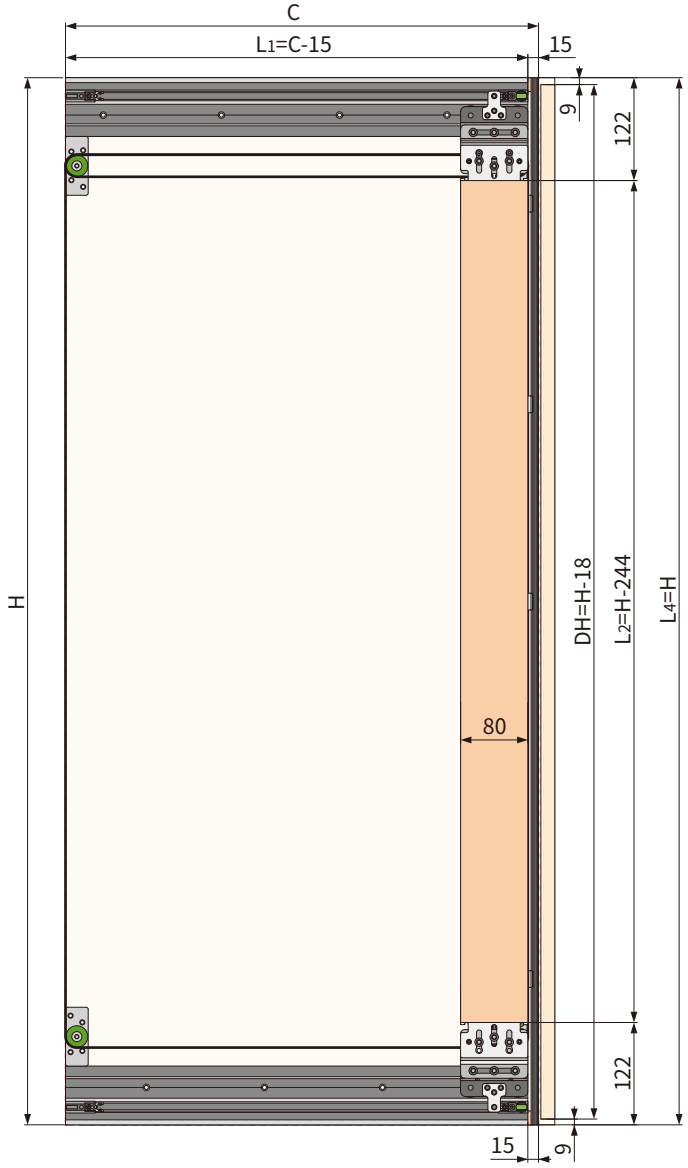

A	Door sheet thickness	L_1	Upper & bottom track length
C	Cabinet depth	L_2	Vertical sheet length
C_1	Connected board depth	L_3	Connecting plate length
H	Cabinet height	L_4	Weather strip profile & Brusher length
W	Cabinet width	DW	Door sheet width
DH	Door sheet height	DW_1	Pocket depth for hiding door
DH_1	Measurements for making holes on door panel		

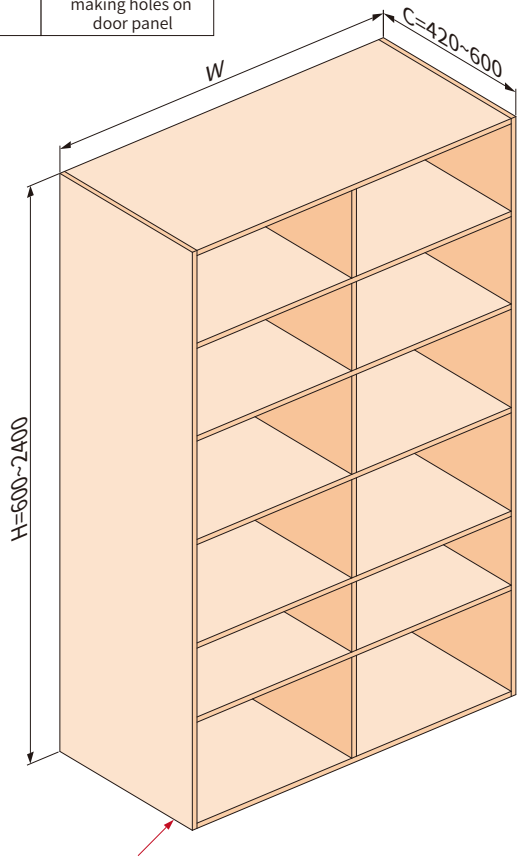

Notice: Don’ t have skirting line.

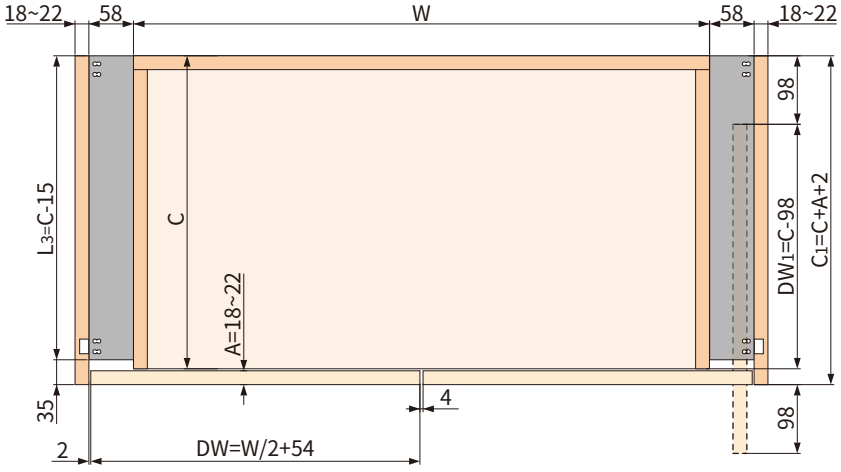


(when) DW= C1：DW-C1+98=98
(Size of the door section left outside the pocket is acceptable)


(when) DW＞C1: DW-C1+98＞98
(Size of the door section left outside the pocket is big)


(when) DW＜C1: DW-C1+98＜98
(Size of the door section left outside the pocket is small)

2024.04.16


Installation parameters

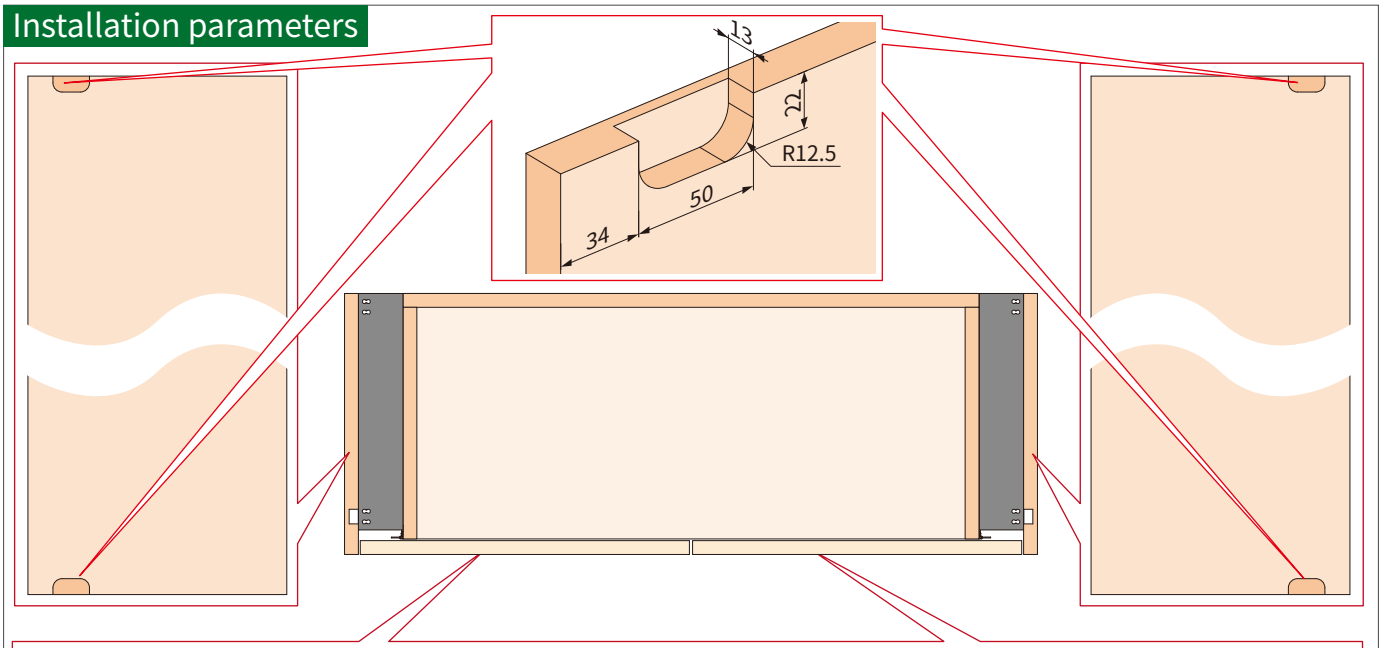

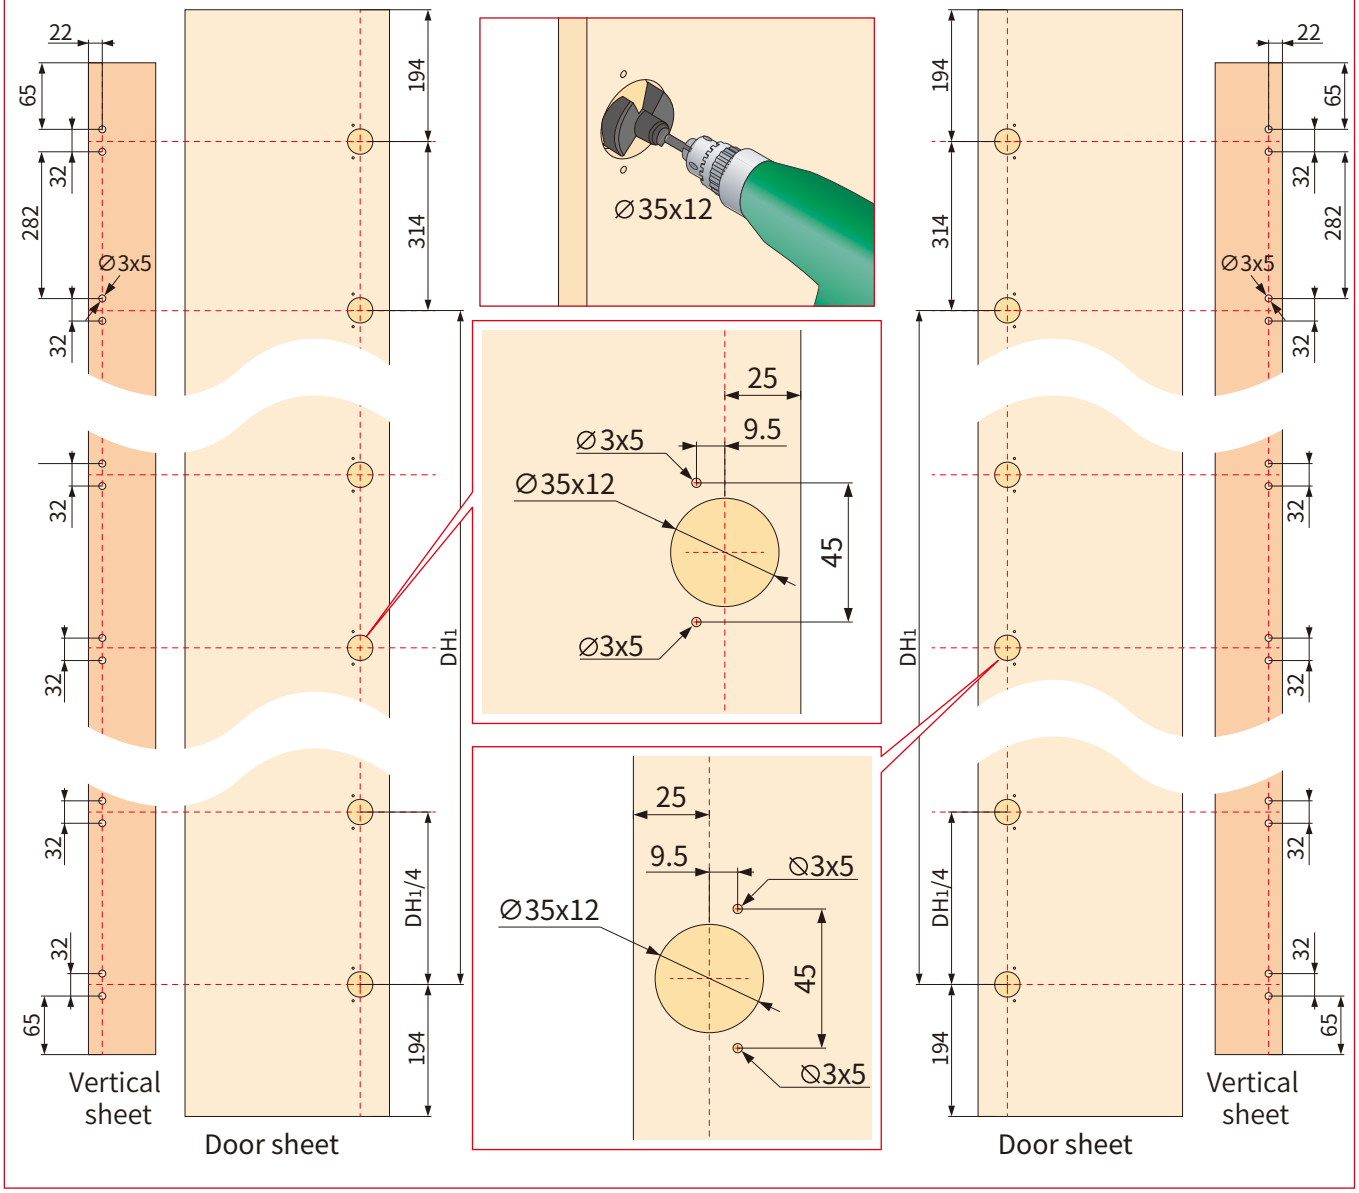


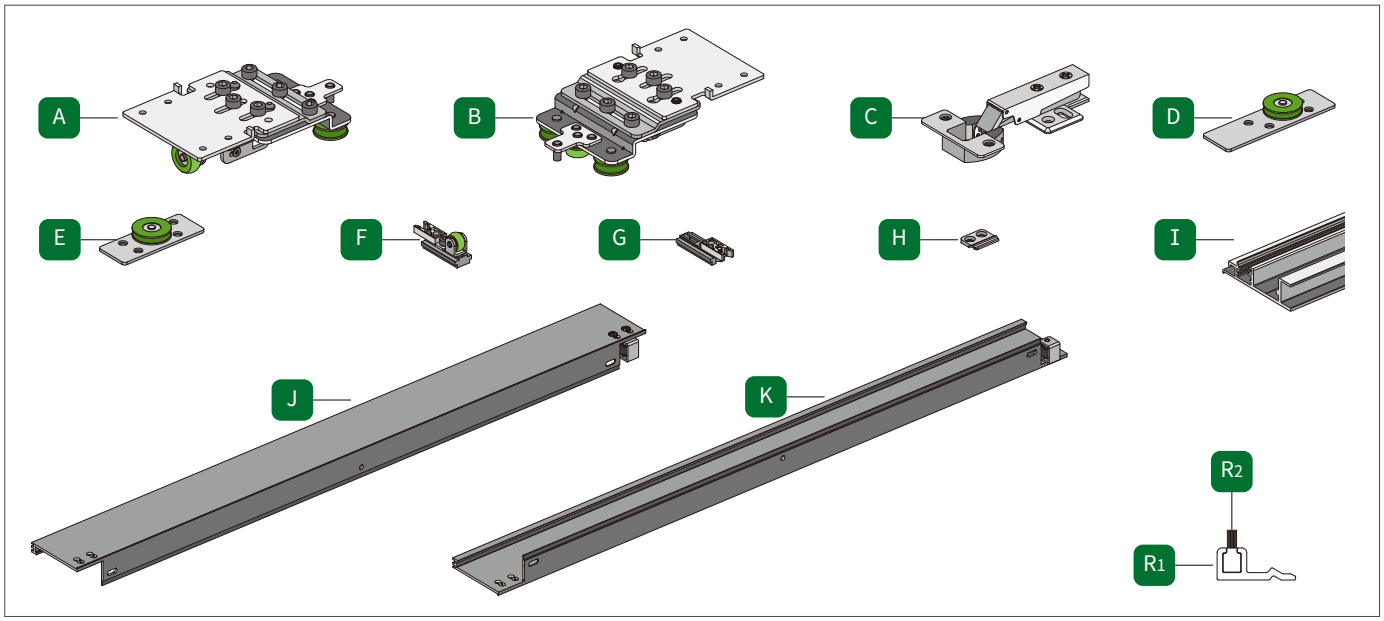



1 Cutting tracks

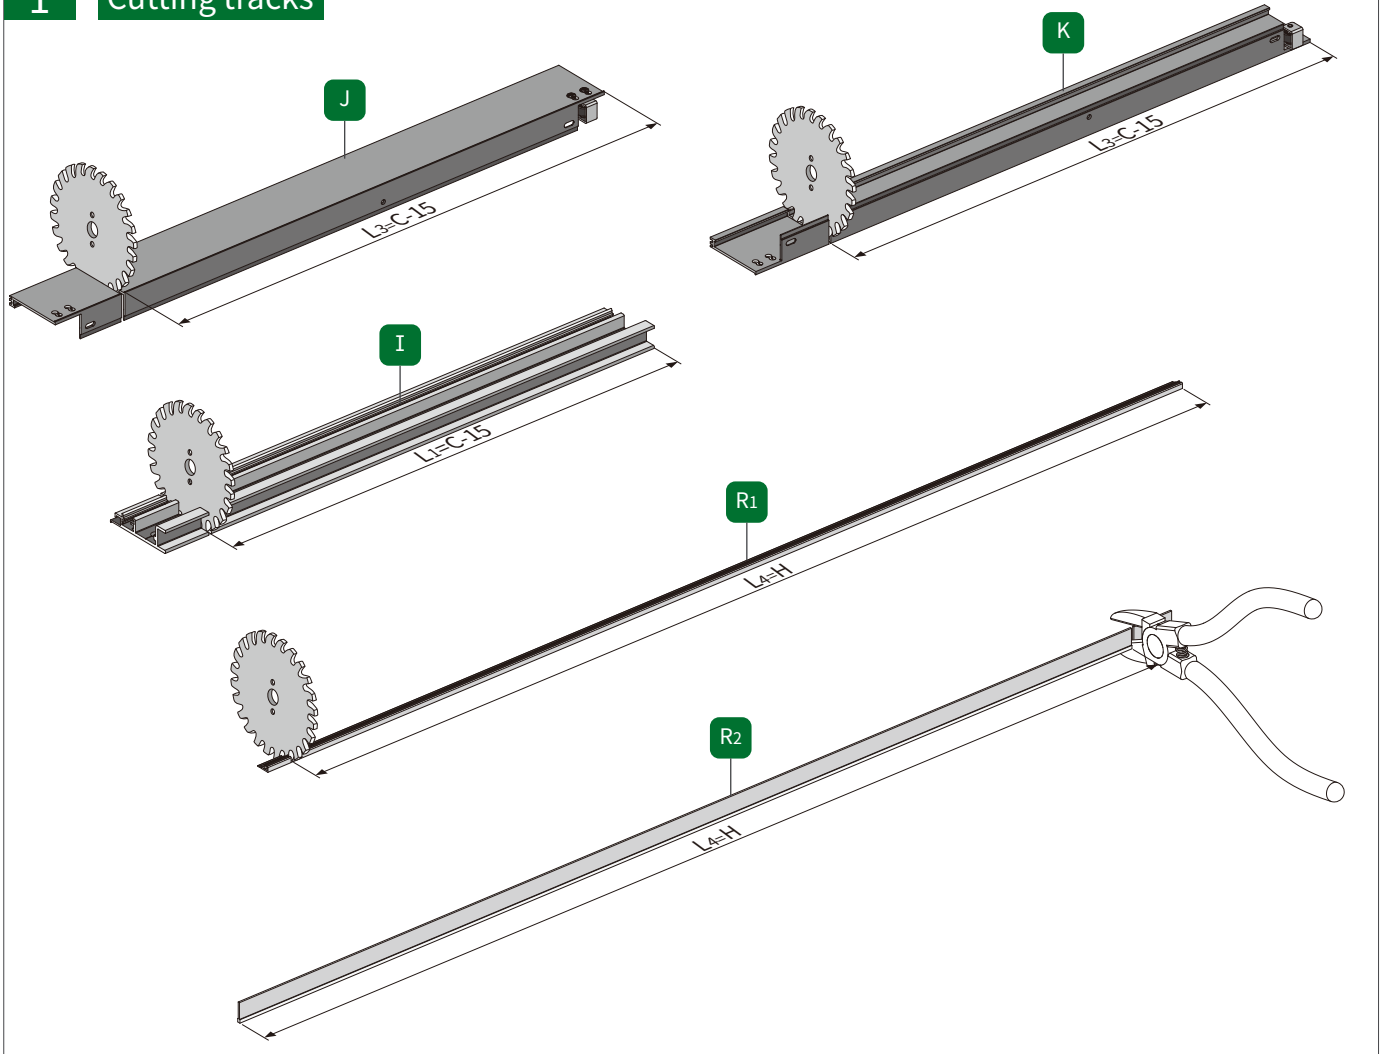


2 Install fittings on door sheet

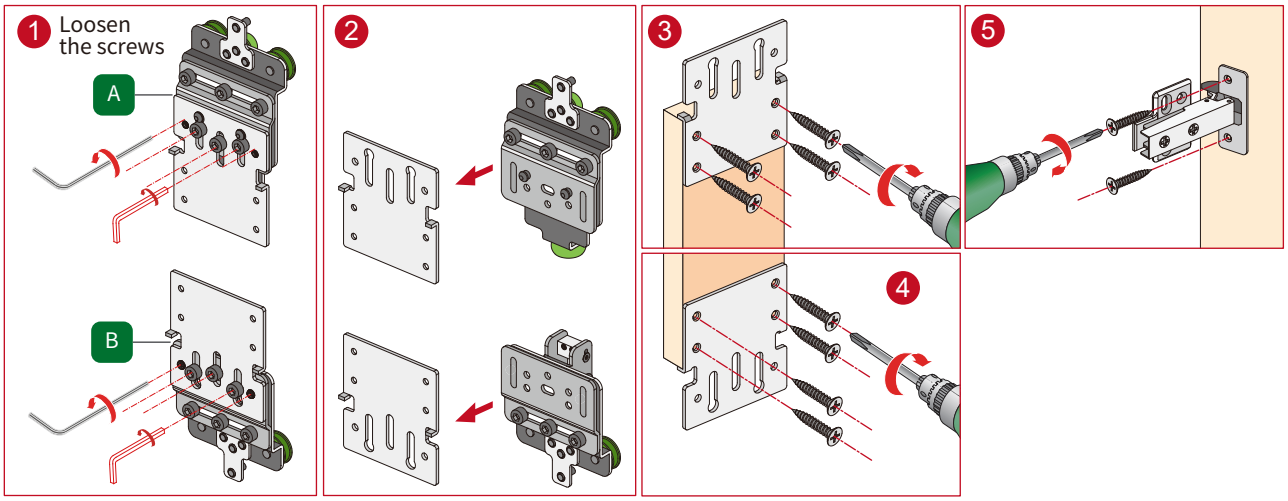

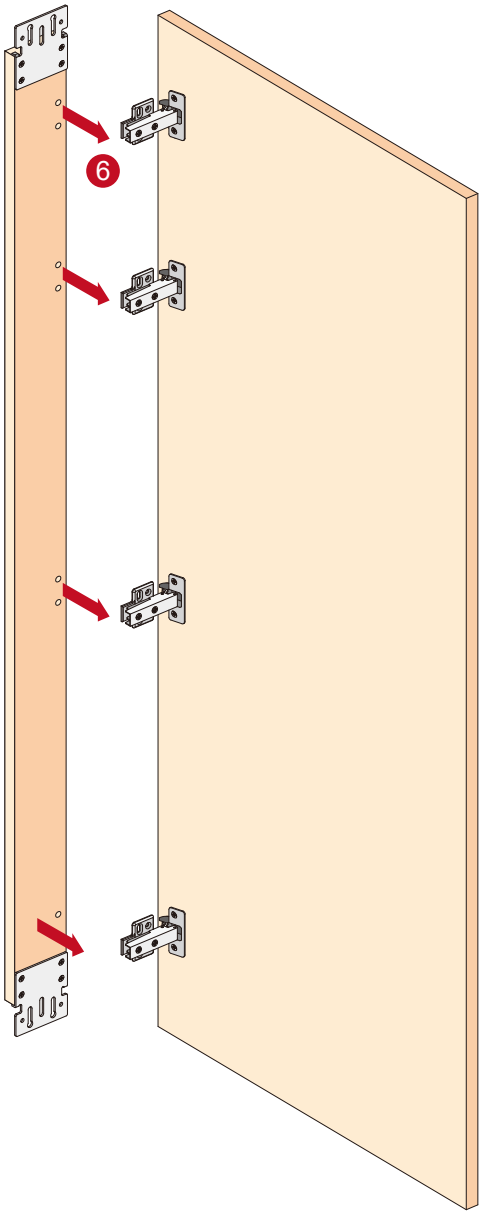


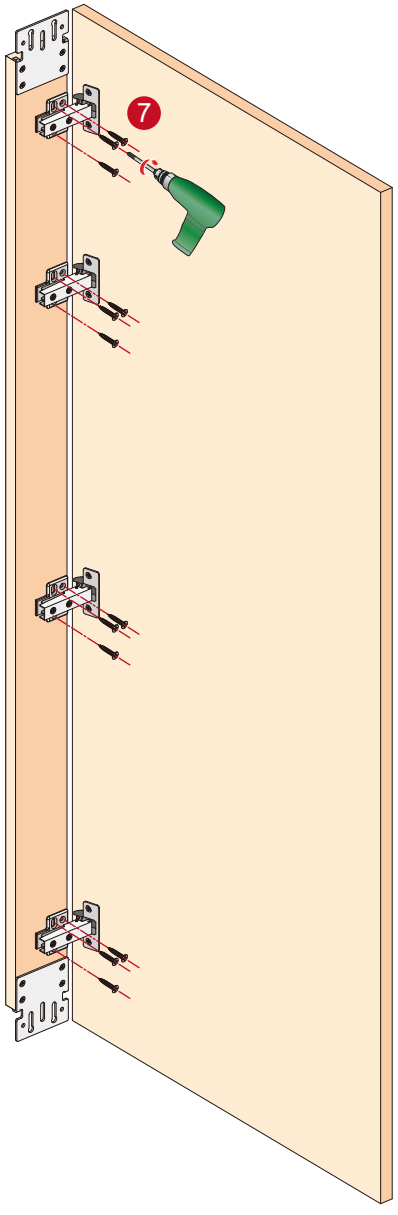



3 Install upper & bottom track

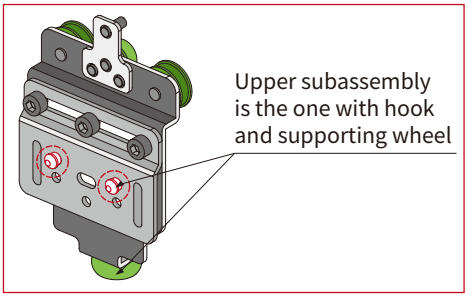


Make sure the cabinet is level and vertical

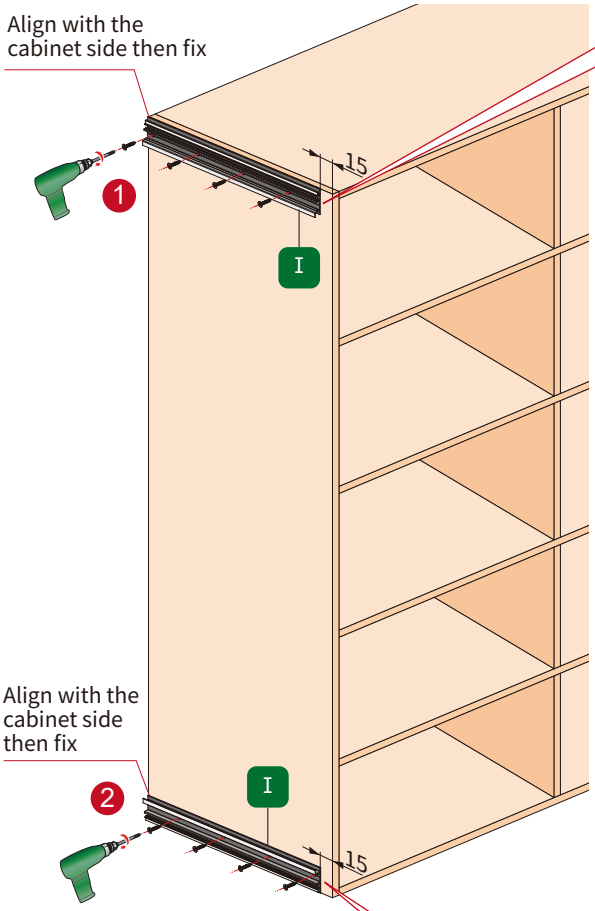


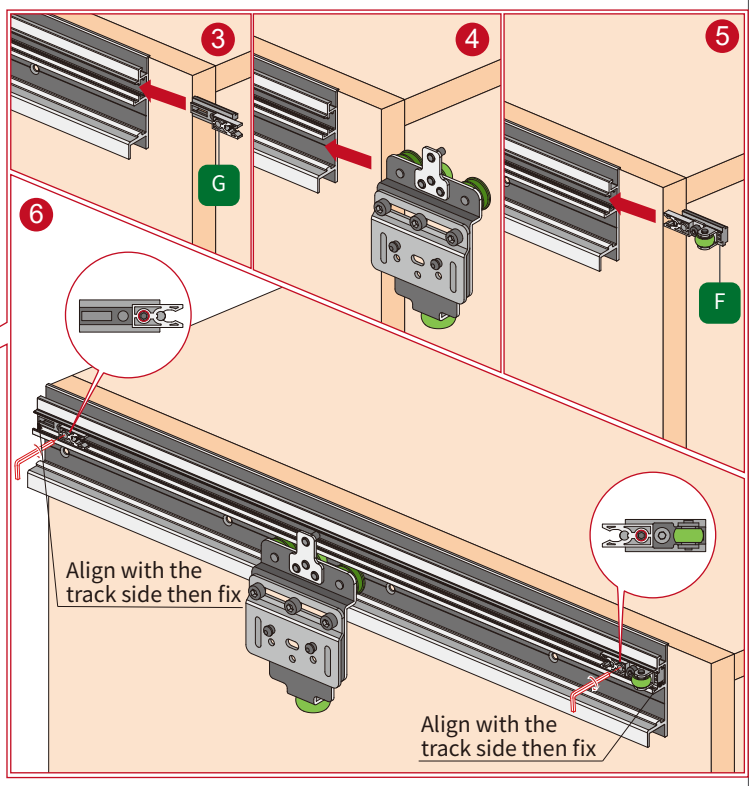

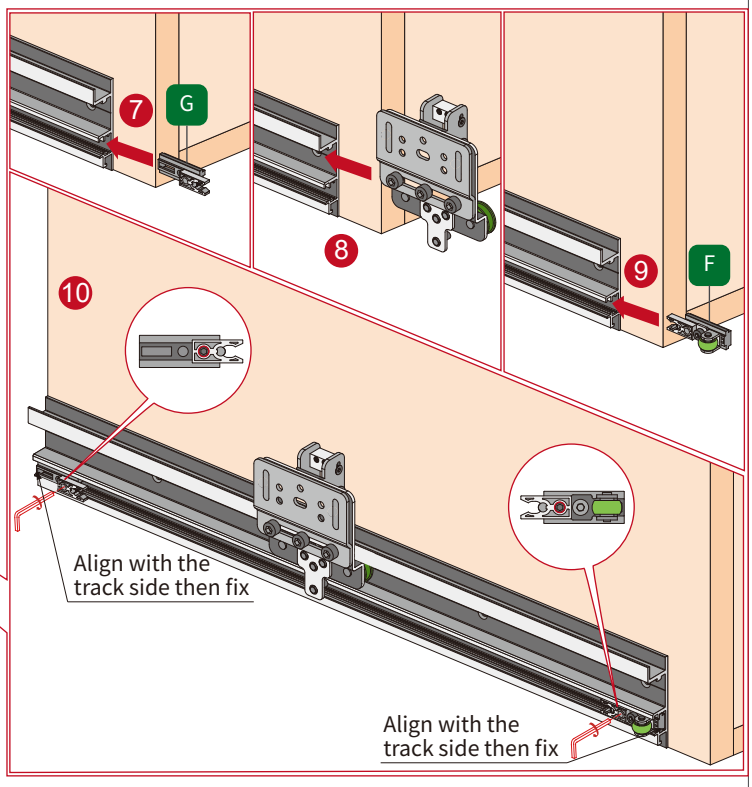


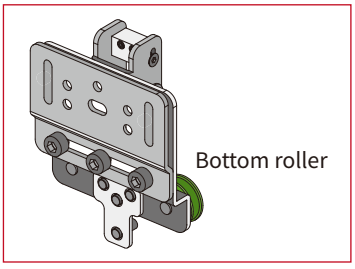


4 Install door opener seat

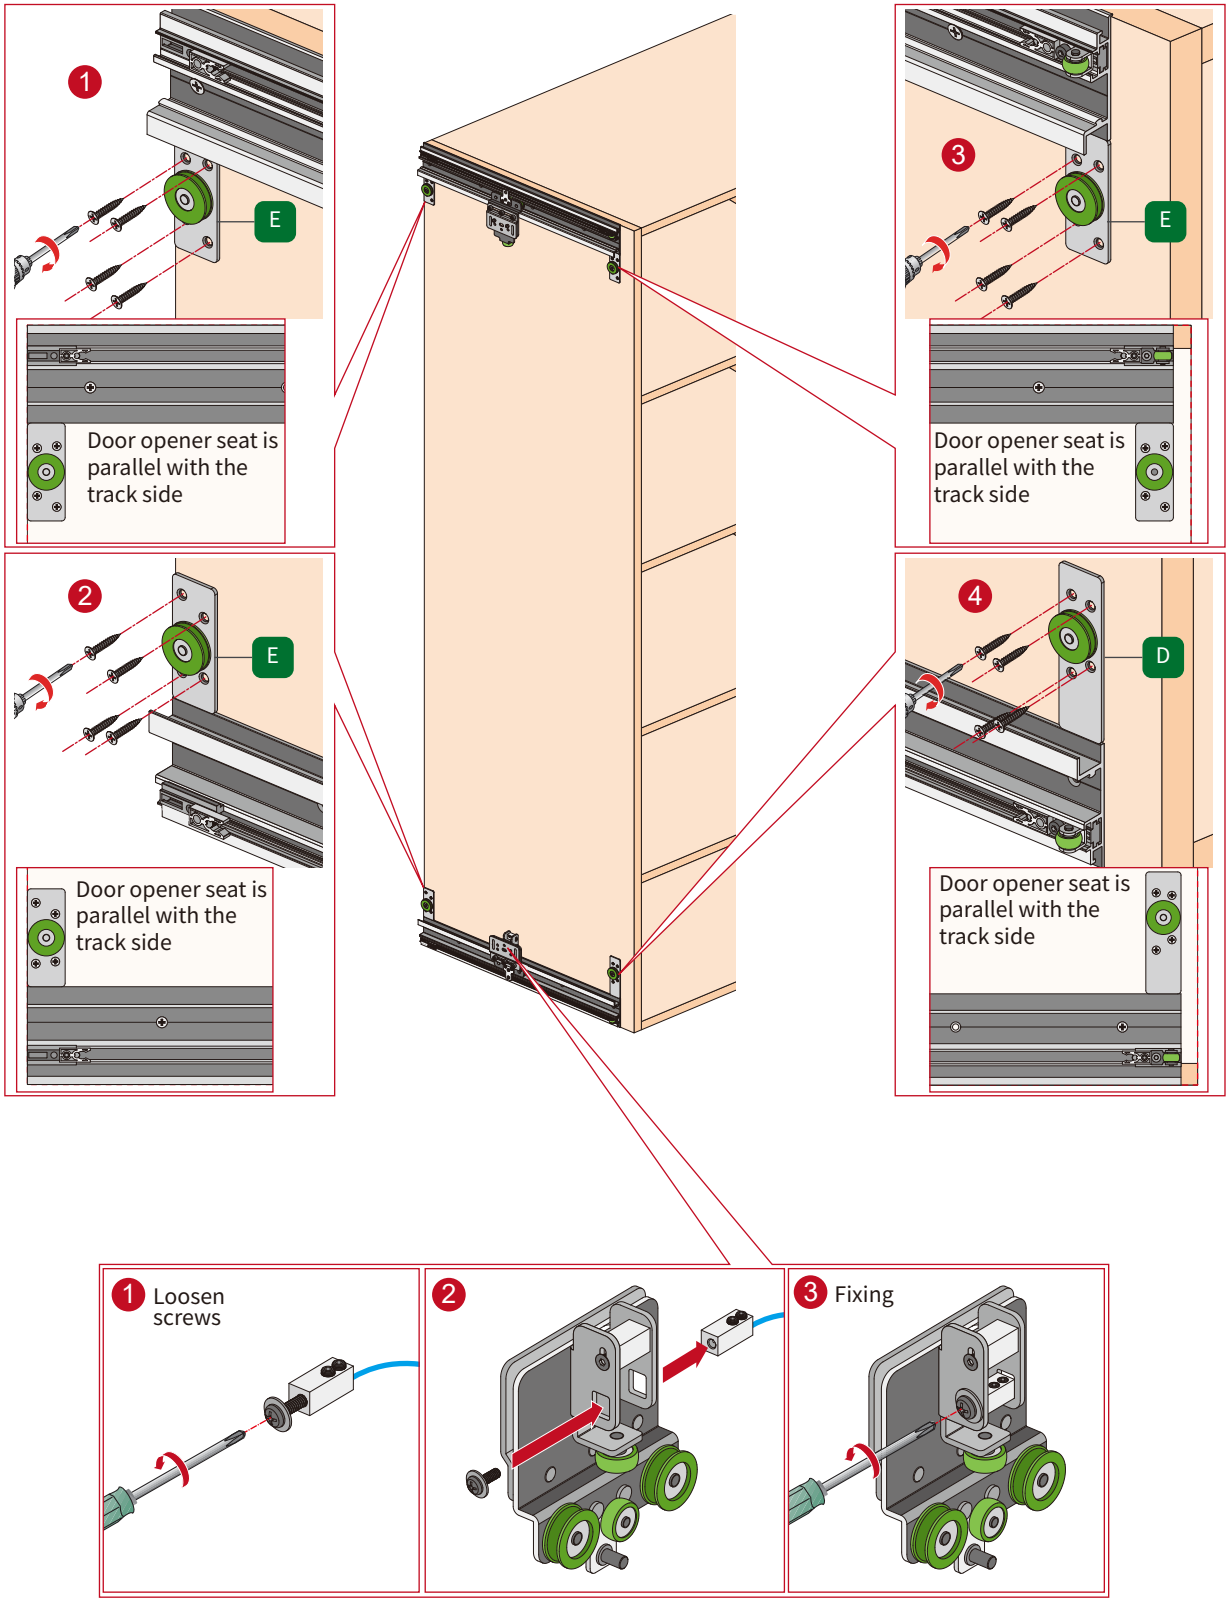


5 Install plastic fixed part

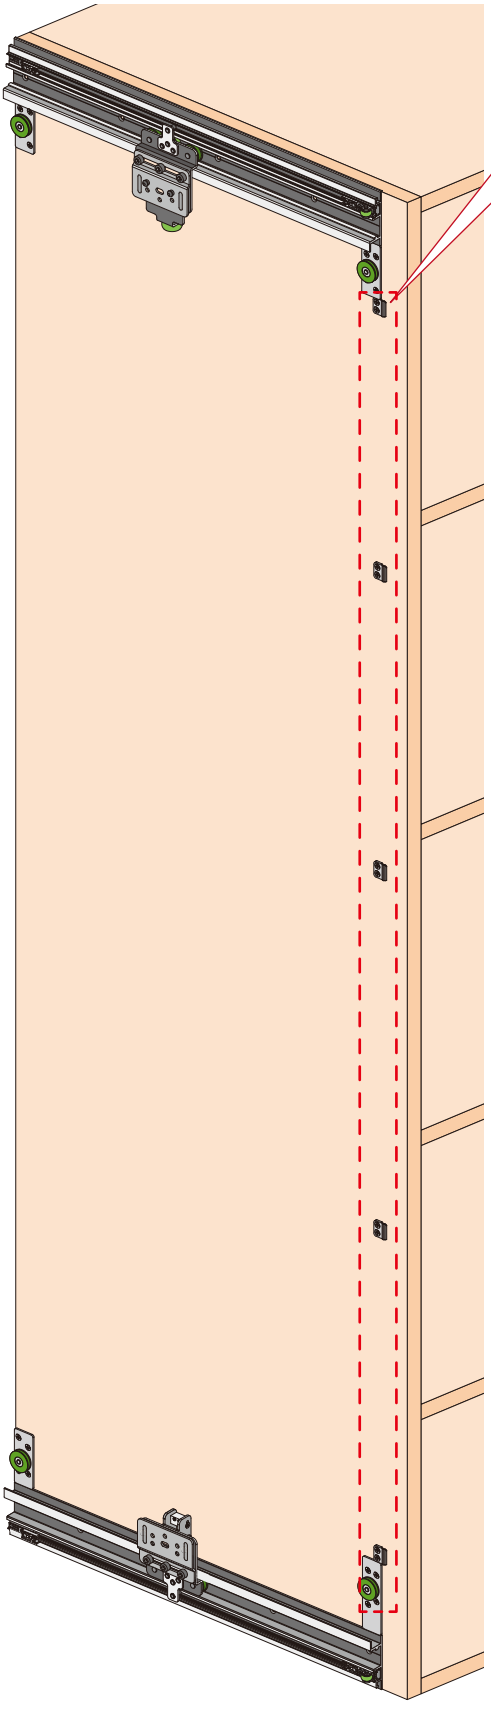


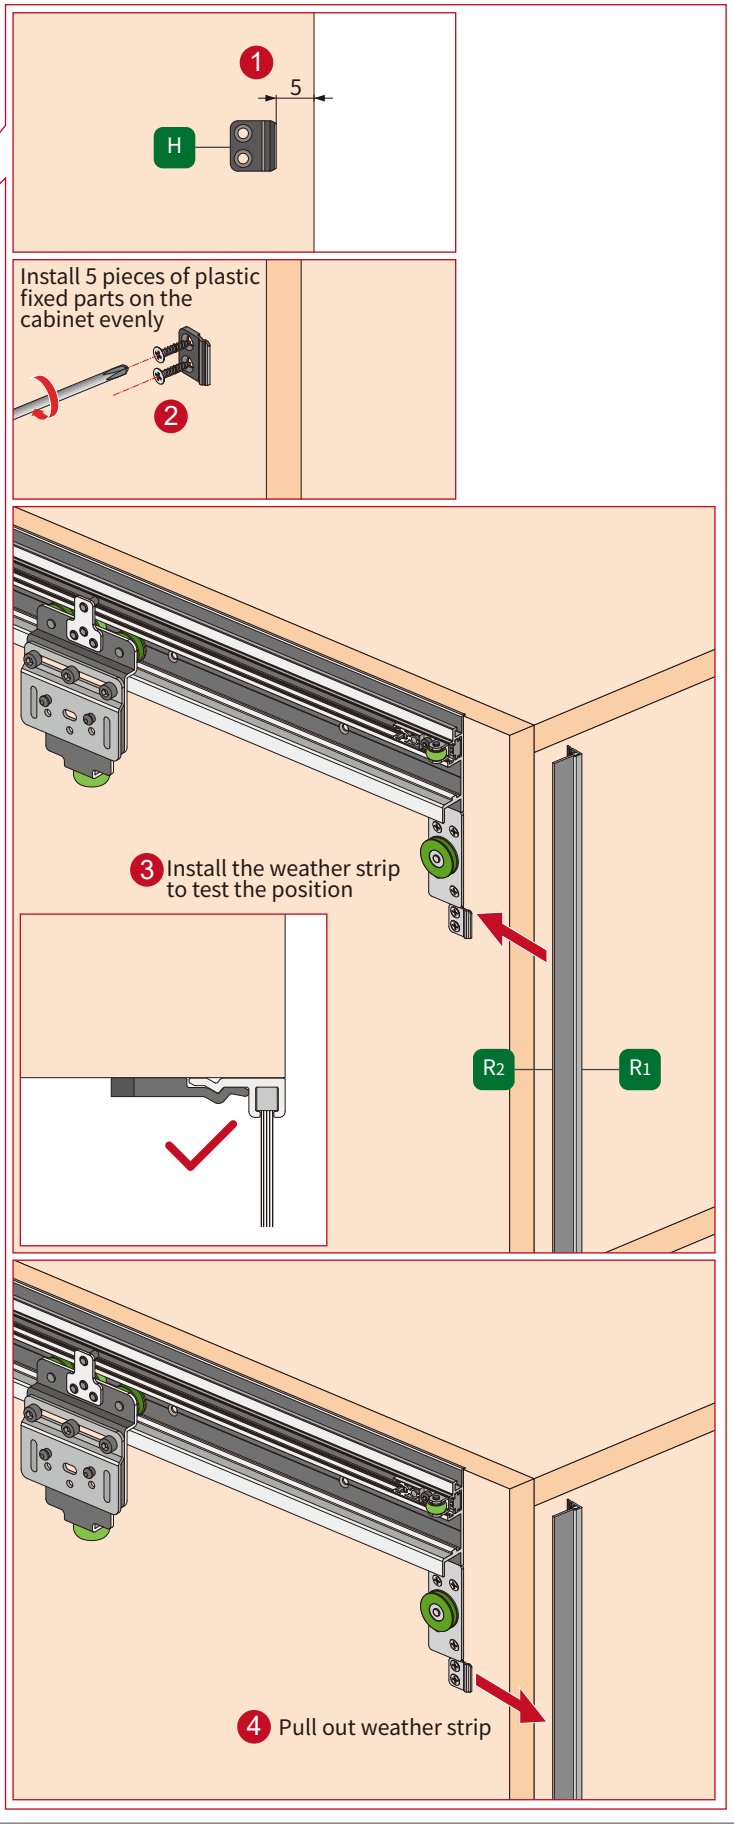



6-1 Install steel wire

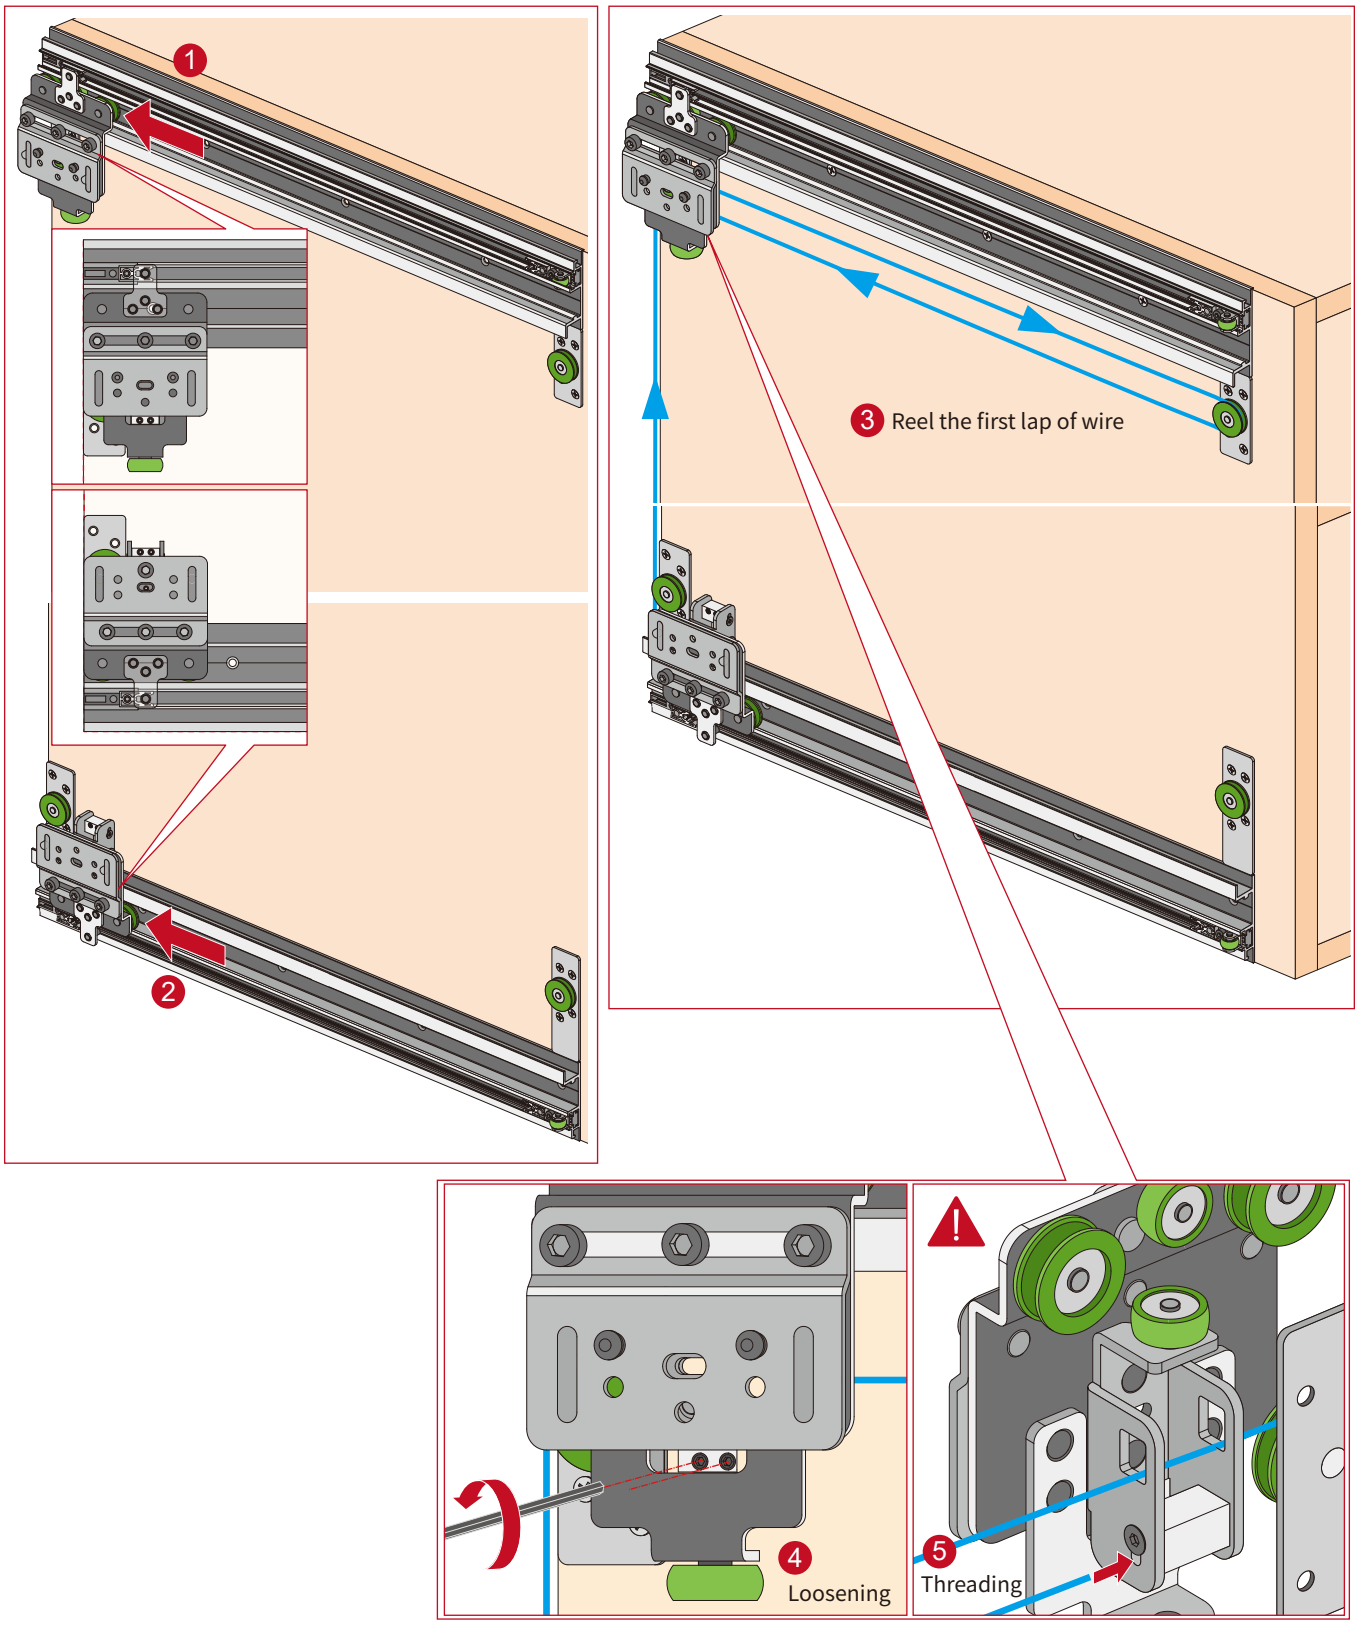



6-2 Install steel wire

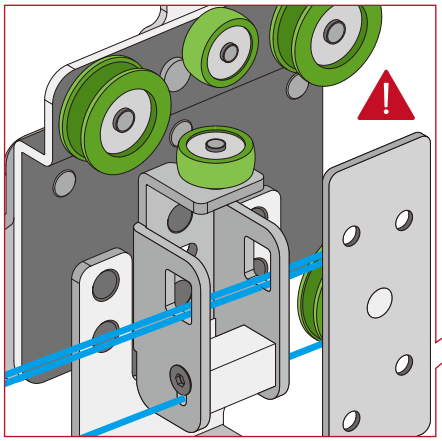


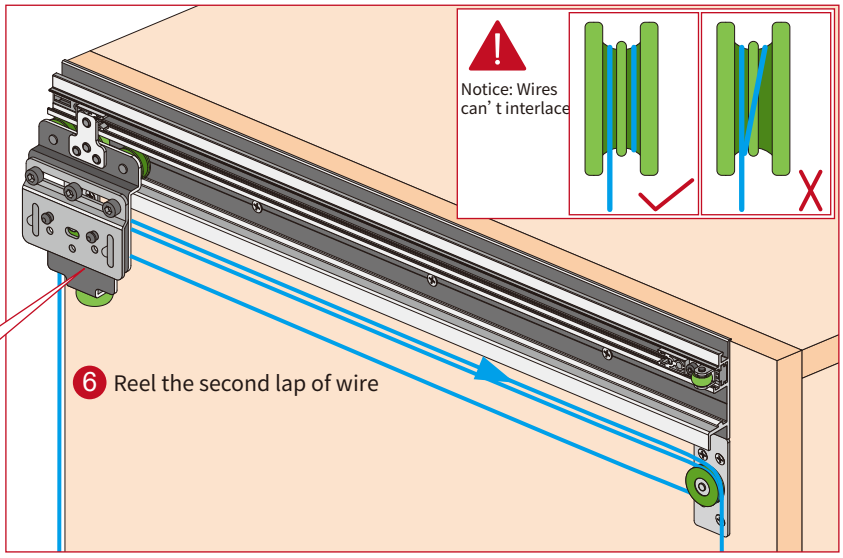


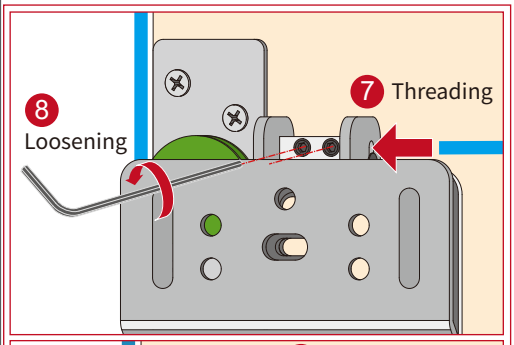

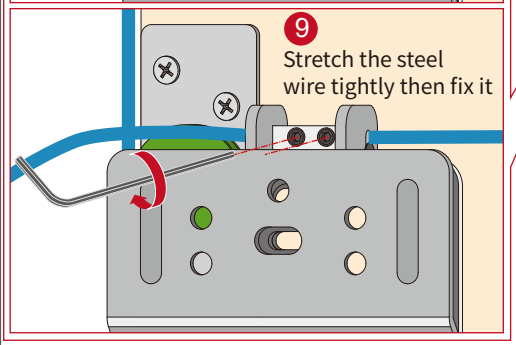


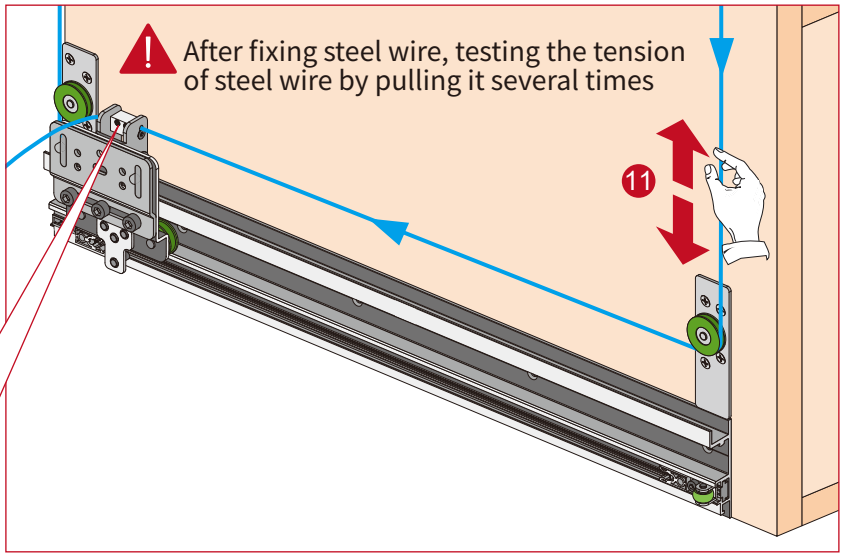

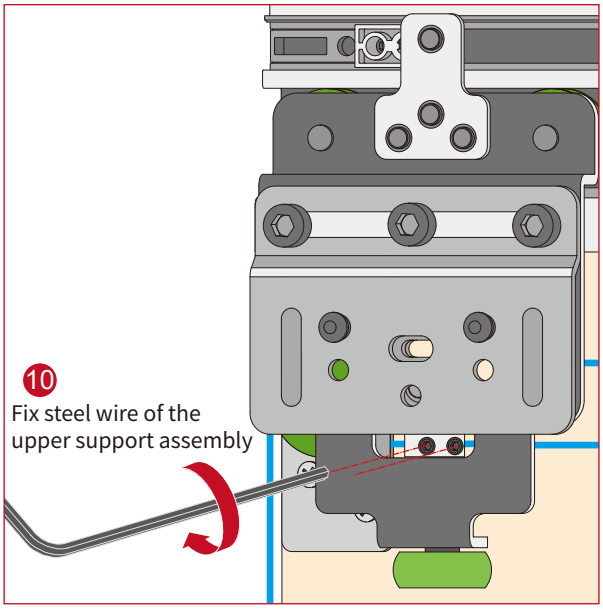


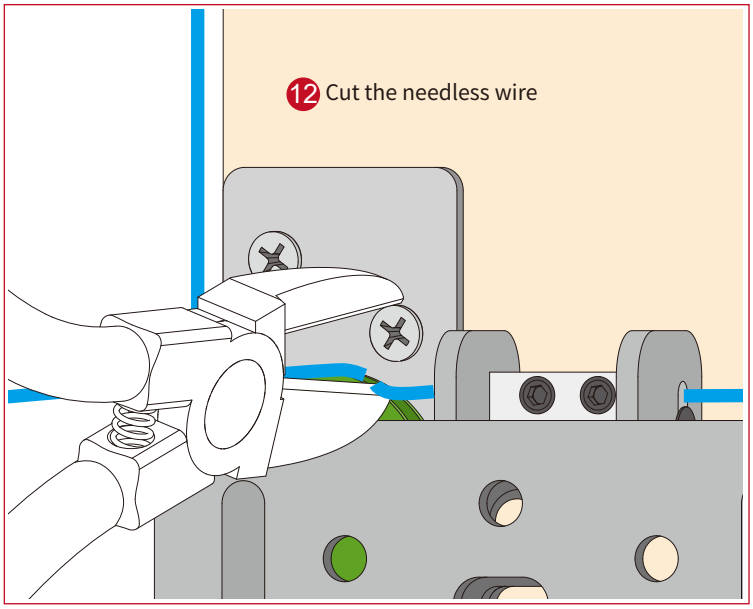


7 Install door panel

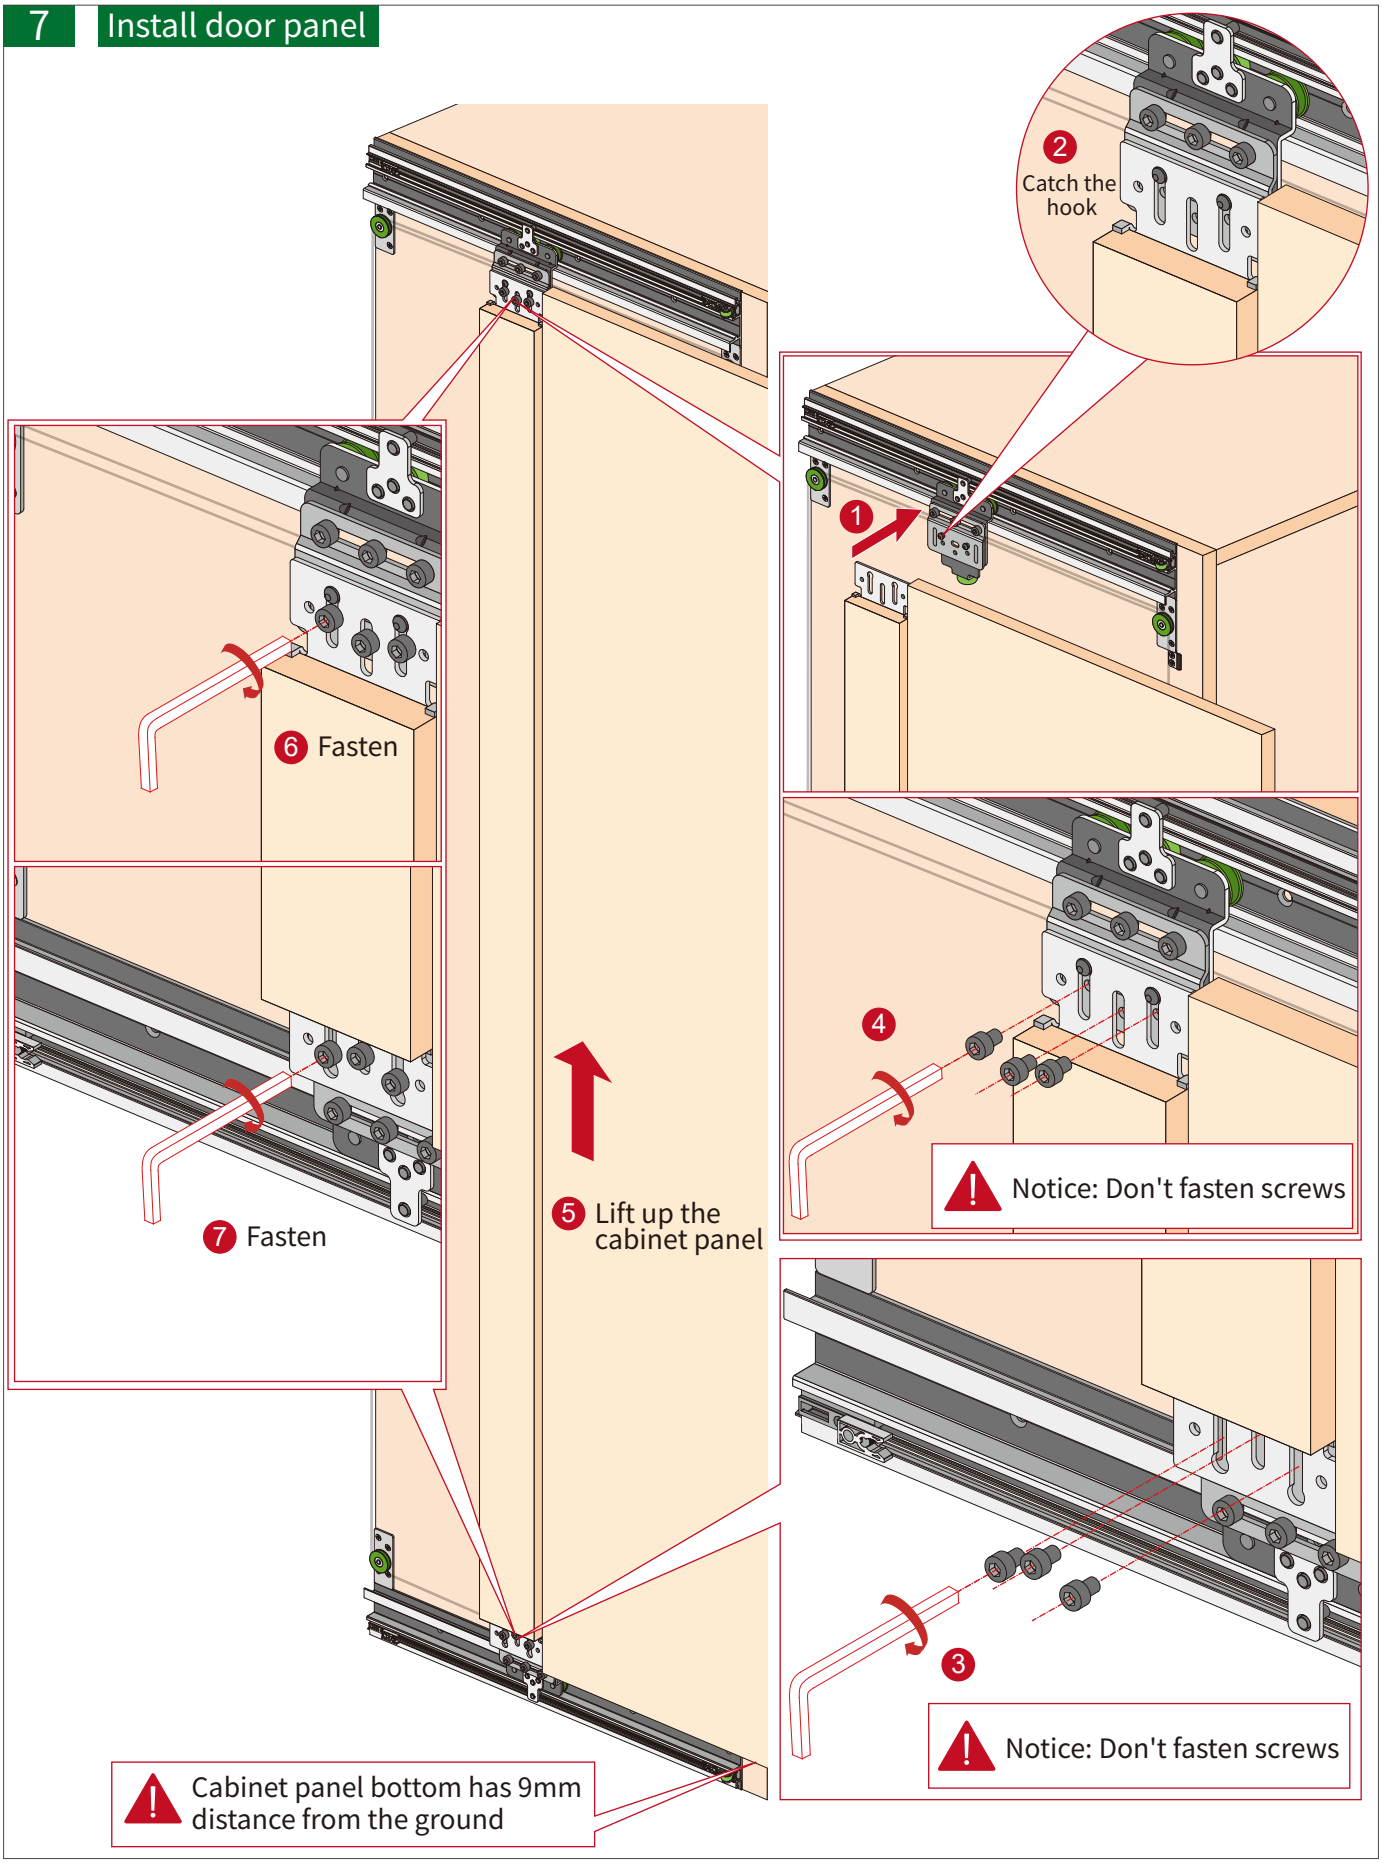



8 Adjust door panel

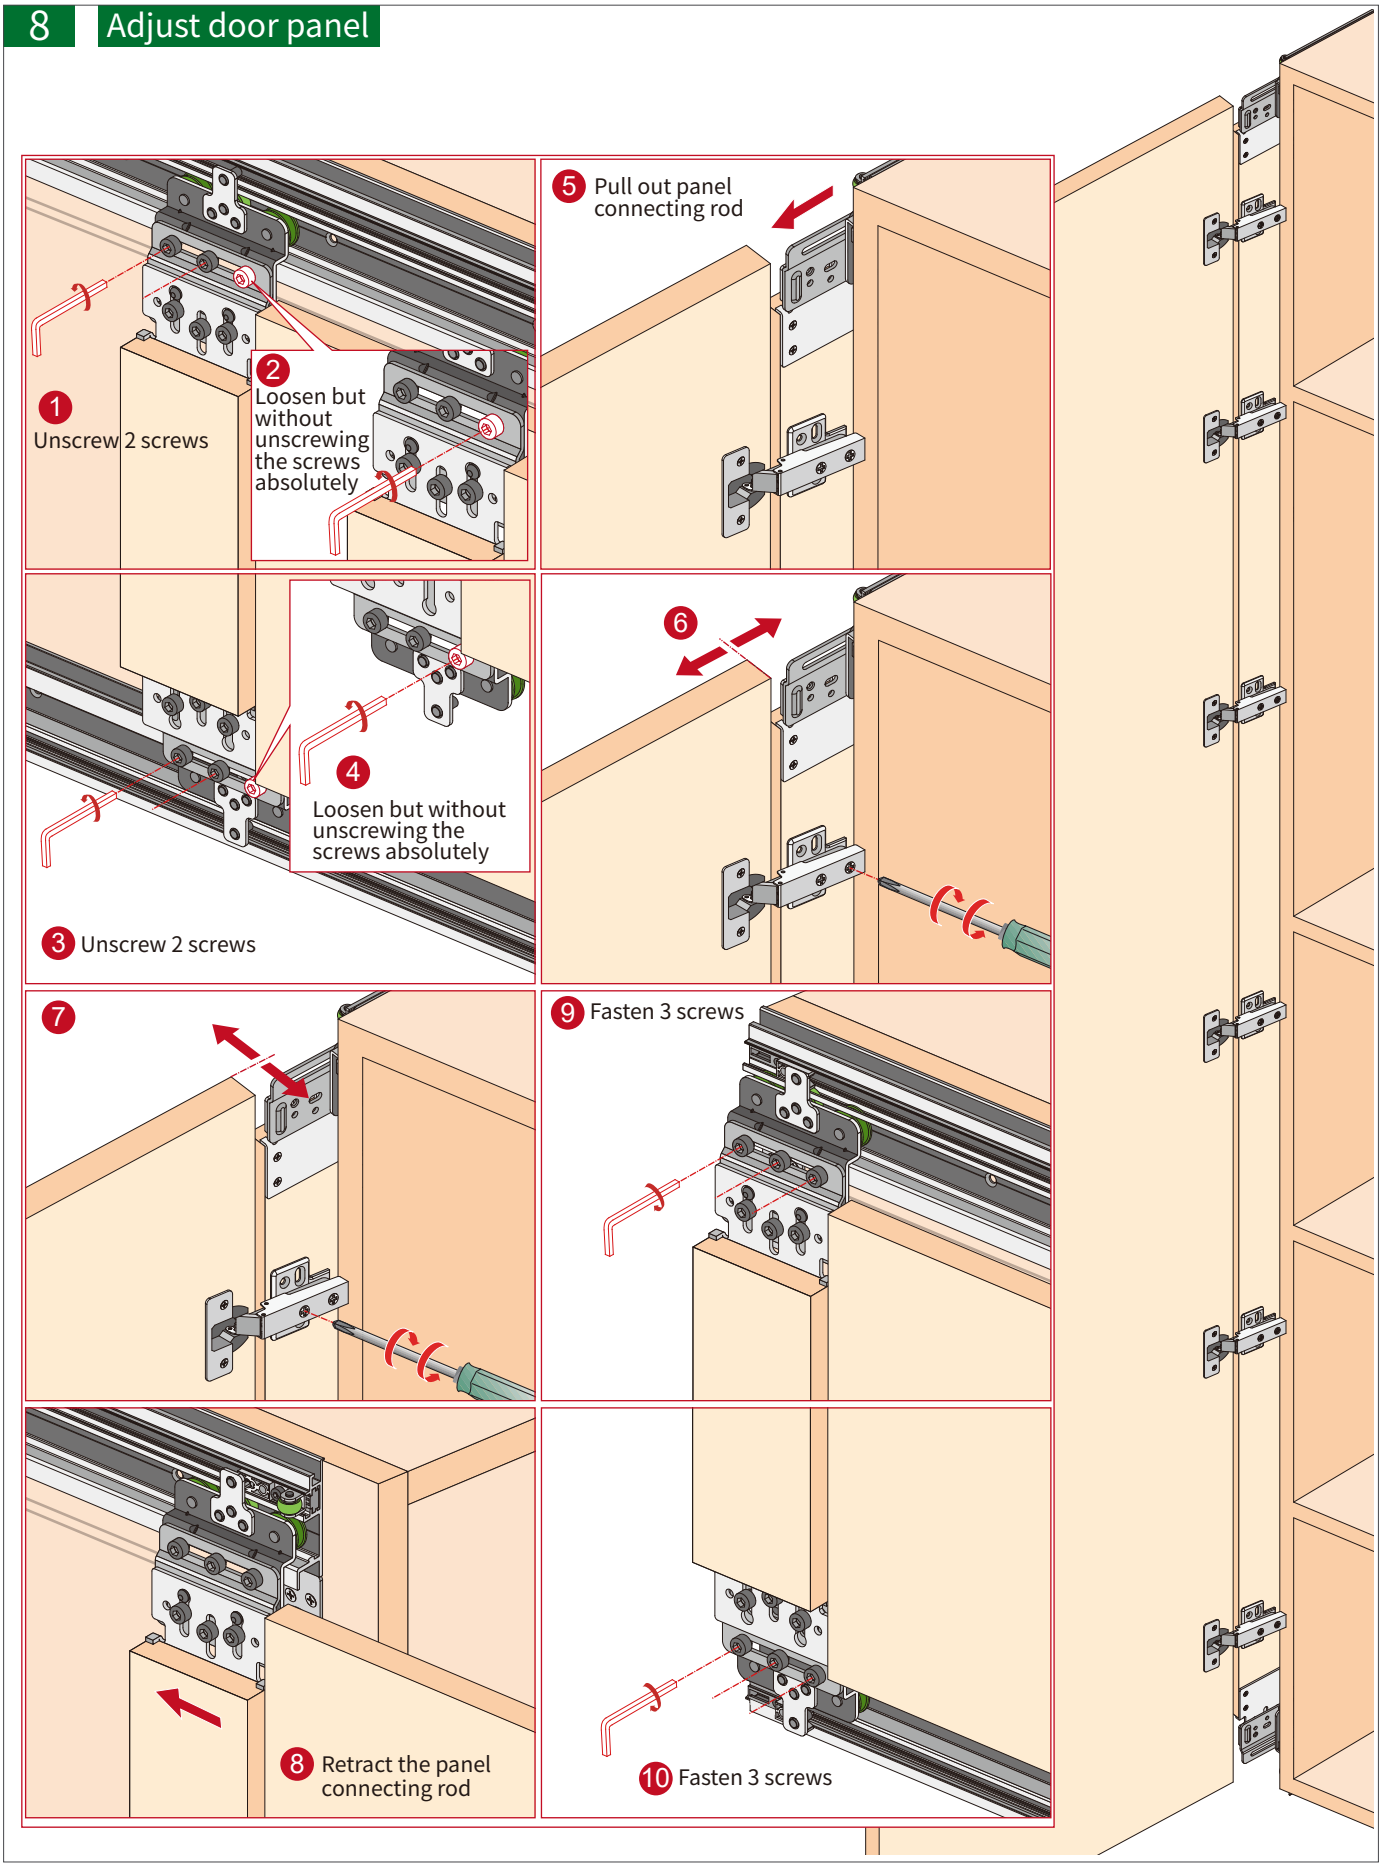



9 Install the connected plate & weather strip

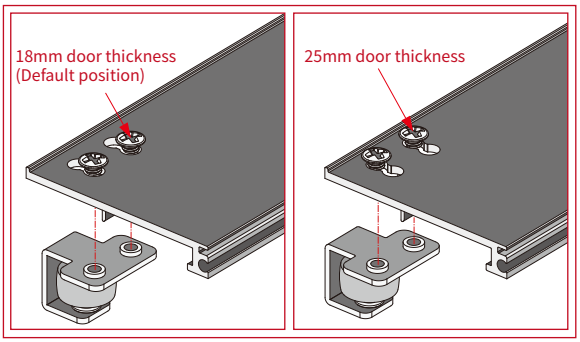


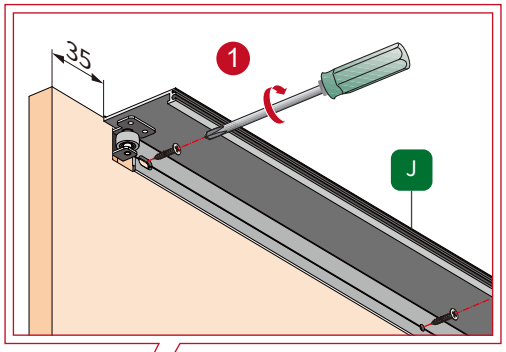


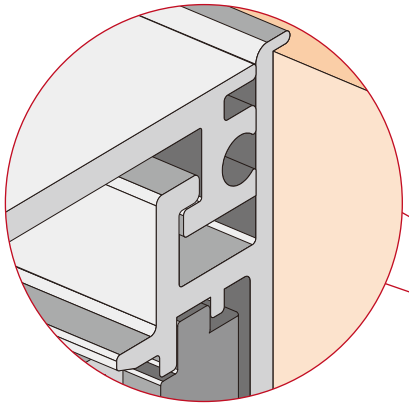


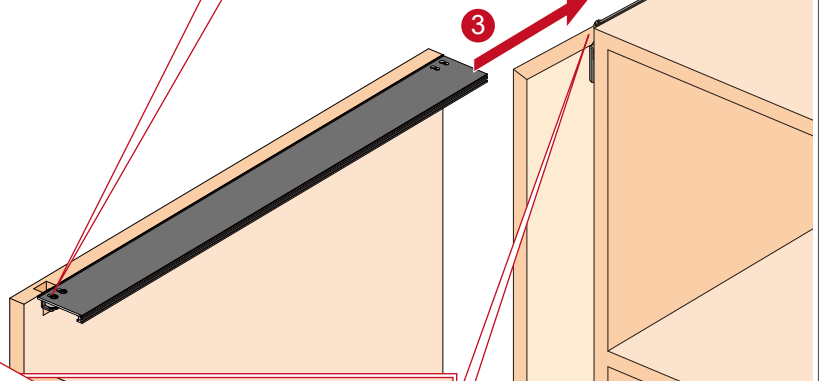


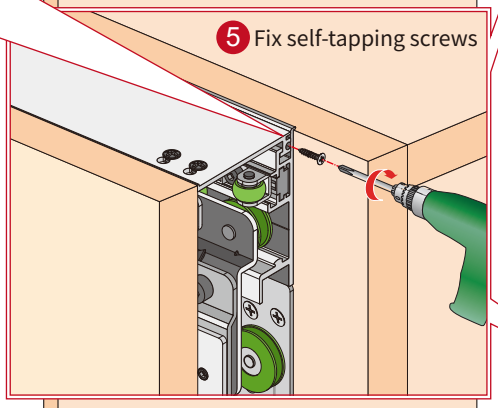


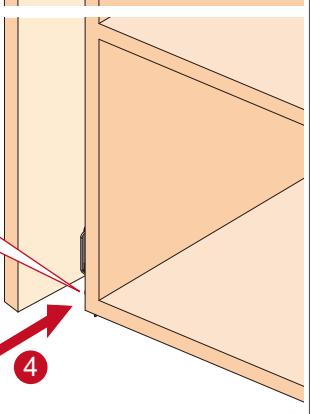

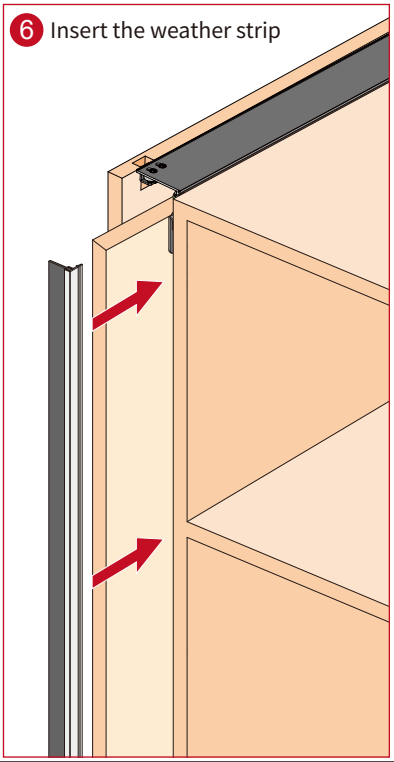

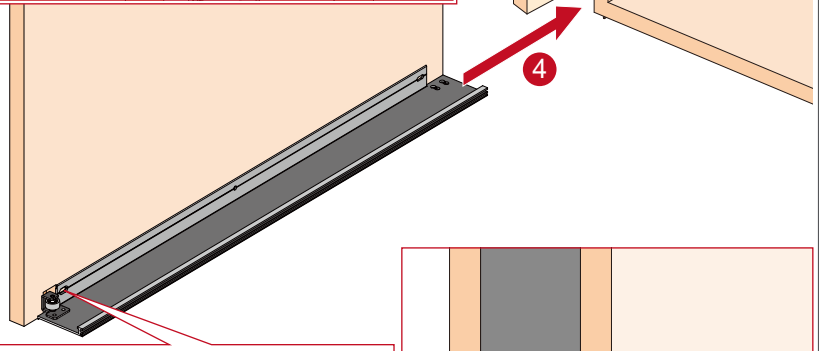

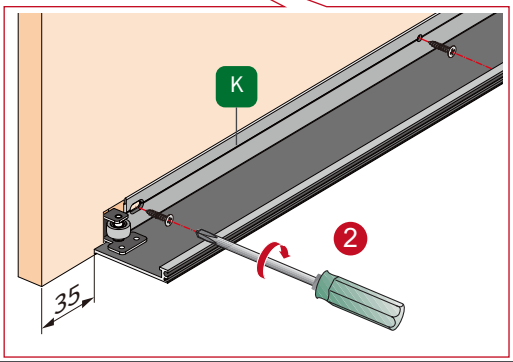

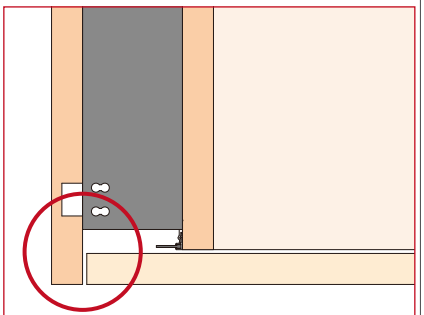

7 Close door panel to see if the connected plate is parallel with door panel