
Universal Timber Jamb kit Fitting Instructions

Suitable for – ISCA, Coburn Hideaway and other similar pocket kits.

The Jambs are suppled unfinished. It may be advisable to prime them before fitting.

The brush strips come in 2 sizes (5mm or 12mm) The appropriate size can be selected on site and inserted into the self-adhesive carrier.
The brush needs to be slid into the carrier from the end. Do this before fixing the carrier in place.

How to fit the Closing Edge Jamb

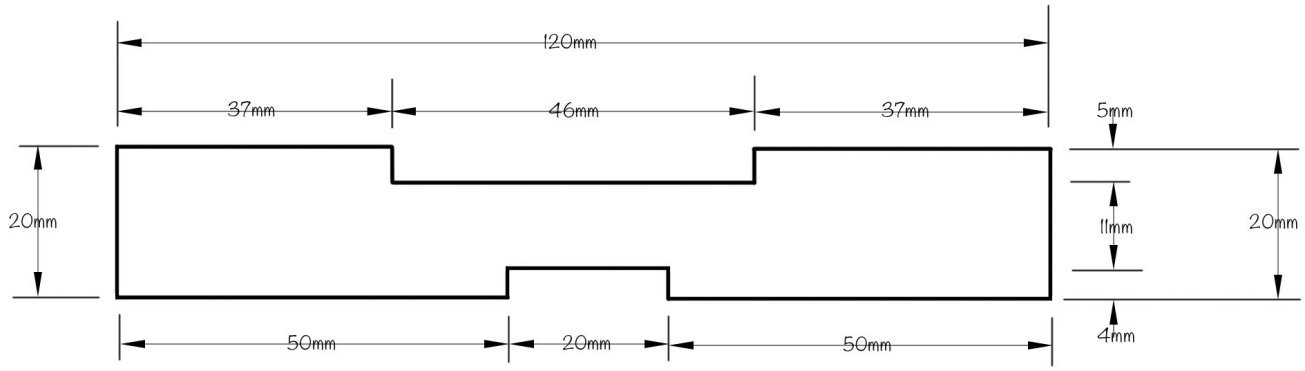

Measure from the finished floor to the underside of the timber track packer.


Cut the Closing Edge Jamb to the height required.

Place against the studwork. Ensure the jamb has equal overlap on both sides of the studwork.

Use desired fixing method. Screws, Nails, Adhesive ect (not supplied with kit)

Note: We recommend screwing it in place as this allows for you to remove this at a later date.

How to fit the Pocket Edge Jamb

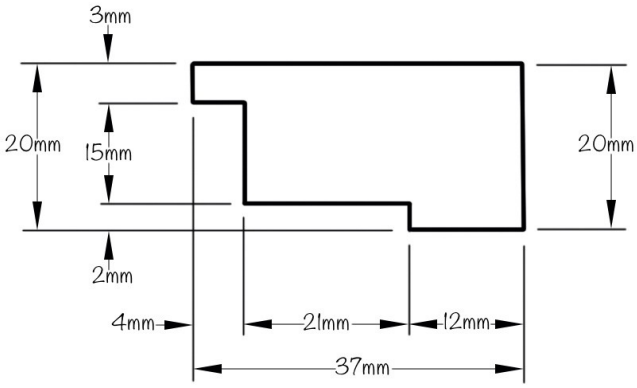

Measure from the finished floor to the underside of the timber track packer. Check both sides of the pocket.

Cut the Pocket Edge Jambs to the height required.


Fit the brush and carrier to the 15 x 4mm cutout on the Pocket Jambs.

The Pocket Edge Jamb has a 21mm recess section that can slot against the pocket kit uprights.

Use desired fixing method. Screws, Nails, Adhesive ect (not supplied with kit)

Note: We recommend screwing it in place as this allows for you to remove this at a later date.

How to fit the Header Jamb

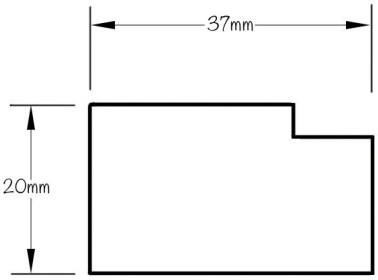

After fitting the Closing Edge Jamb and Pocket Edge Jambs.
Measure the distance between these jambs.

Cut the Header jamb down to size required, twice. You will get 2 Header pieces out of 1 length.

Ensure the Header Jamb is flush with the Closing Edge Jam and the Pocket Edge Jamb on both sides.

Use desired fixing method. Screws, Nails, Adhesive ect (not supplied with kit)

Note: We recommend screwing it in place as this allows for you to remove this at a later date.

Once finished fill in any screw holes and paint your desired colour.

For Double Pocket door kits

Ignore the Closing Edge Jamb instructions. You don't have this piece.

Follow the Pocket Edge Jamb instructions for both pockets.

Follow the Header Jamb instructions.
Mesure the distance from one set of Pocket Edge jambs to the other set of Pocket Edge Jambs.
You have 2 Header pieces cut each down to fit the distance mesured above.